

INSTRUCTION MANUAL

WEBHANDLER™ AUTOMATIC TENSION CONTROLLER



5 YEAR WARRANTY



217 Pickering Road

Rochester, NH 03867-4630 U.S.A.

For assistance, please call:

TECHNICAL SERVICE - Installations, Start-Up, Troubleshooting, Repairs, Field Service, Returns. **techsupport@dfe.com**

CUSTOMER SERVICE - Replacement Parts, Individual Products, Questions about Orders, Manuals. **customerservice@dfe.com**

SALES - Product Information, Systems Application Questions, and placing orders for standard products and special systems. **sales@dfe.com**

Telephone: (603) 332-6150 Fax: (603) 332-3758

E-mail: info@dfe.com Internet: www.dfe.com

READ THIS!


Your WebHandler™ Controller has been properly configured at our factory. To install it and start it up, it should only be necessary to use these sections of this manual:

Section 2 - Installation

Section 3 - Calibration and Set-Up

The other sections are for reference and for instruction if you wish to change the configuration at some later time.

EXAMPLE OF TENSION ZONES

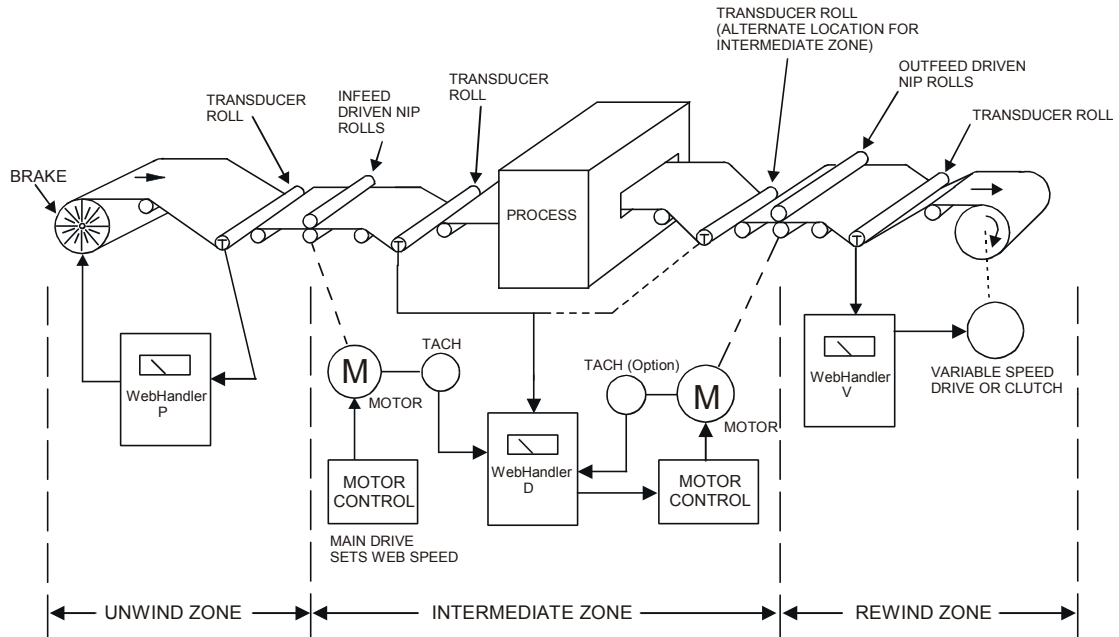

Tension zones are created by driven or braked nip rolls, drag bars, braked or driven unwind or rewind shafts, or anything else that can increase or decrease web tension. One of these elements is at each end of every tension zone.

Many machines that process a continuous web have more than one tension zone. The WebHandler™ controller can be used in all tension zones, however it may need to be configured for the zone it will be used in. The information below will be used later to determine the correct configuration.

TABLE OF CONTENTS

SECTION ONE	DESCRIPTION	PAGE
1.1	General Description	1
1.2	Outputs, Version of Controller	1
1.3	WebHandler™ Controller Exploded View	2
1.4	Specifications	2
1.5	Standard Features	3
1.6	Options	3
1.7	Front Panel & Operator Devices	4
SECTION TWO	INSTALLATION	
2.1	Standard Dimensions	5
	Dimensions of Remote Panel Configuration	5
	Dimensions of Remote Servo Valve Enclosure	6
	Dimensions of Dual Valve Servo Valve Enclosure	6
2.2	Selection of Mounting Location	7
2.3	Installation Instructions	7
2.4	Power Voltage	7
2.5	Transducer Excitation	7
2.6	Std. Electrical Connections	8
2.7	Electrical Connections for Options	8
SECTION THREE	CALIBRATION AND SETUP	
3.1	Mechanically Zero the Tension Meter	9
3.2	Calibrate the Meter for Accuracy	9
3.3	Meter Damping	9
3.4	10 Volt Output	10
3.5	Digital Meter Option	10
3.6	Emergency Stop	11
3.7	Extended Range Option	12
3.8	High Voltage Output	12
3.9	Isolated 10 Volt Output Option	12
3.10	Line Speed Follow	13
3.11	Meter Correlation	14
3.12	Pneumatic Output / Remote Pneumatics in Enclosure	14
3.13	Remote Tension Amplifier Option	16
3.14	Reverse Output Option	16
3.15	Soft Start	17
3.16	Taper Tension / 10 Volt Taper Card Option	18
3.17	Tension Limit Switch	19
3.18	Tuning Adjustments	19
SECTION FOUR	OPERATING INSTRUCTIONS	21
SECTION FIVE	CARE AND MAINTENANCE	22
SECTION SIX	TROUBLESHOOTING GUIDE	23
SECTION SEVEN	REPLACEMENT PARTS	
7.1	Standard Circuit Boards	24
7.2	Optional Circuit Boards	24
7.3	Operator Devices	24
7.4	Output Modules	24
7.5	Fuses	24
7.6	Cables	24
7.7	Relays	24

APPENDICES

A	PC Boards	25
B	DIP Switch Settings & Jumpers	29
C	Basic Set-up Sequence	30
D	Transducer Electrical Connections	31
E	Typical Tensions	35
	Terms and Conditions	36
	Index	37

LIST OF ILLUSTRATIONS

FIGURE: 1.	Web Handler Controller - Exploded View	2
2.	Front Panel and Operator Devices	4
3.	Standard Dimensions	5
4.	Remote Panel Dimensions	5
5.	Dimensions Servo Valve Enclosure	6
6.	Dimensions of Dual Valve Servo Valve Enclosure	6
7.	Power Switch	7
8.	Transducer Excitation Switch	7
9.	Electrical Connections	8
10.	Electrical Connections of Options	8
11.	Web Path	9
12.	10 Volt Output Jumpers	10
13.	Digital Meter Display	10
14.	Digital Meter Card	10
15.	Digital Meter Switches	11
16.	E-Stop Electrical Connections & Switch Settings	11
17.	Transducer Excitation Voltage	12
18.	High Voltage Output Switch Settings	12
19.	10 Volt Isolated Output Connections	12
20.	Line Speed Follower Electrical Connections	13
21.	Line Speed Follower Switch Settings	13
22.	Remote Pneumatic Connections	14
23.	Non-DFE Pneumatic Driver/DVS Connections	15
24.	Non-DFE Pneumatic Driver Output Jumper	15
25.	Non-DFE Drive Voltage Select Jumpers	16
26.	Remote Tension Amp Switches	16
27.	Remote Tension Amp Connections	16
28.	Reverse Output Switch Settings	16
29.	Soft Start by Low Tension Switch Settings	17
30.	Soft Start by External Contact Connections	17
31.	Soft Start by External Contact Switch	17
32.	Taper Tension Rider Option Card	18
33.	Rider Roll Connections	18
34.	10 Volt Source Connections	18
35.	Tension Limit Switch Settings	19
36.	Tuning Adjustment Pots	20
37.	Control Board	25
38.	Power Board	25
39.	Front Board	26
40.	V-Out Board	26
41.	Non-DFE Driver Module	27
42.	Isolated Output Board	27
43.	Line Speed Follower Board	28
44.	Taper Tension Board	28
45.	C, UPB Transducer Wiring	31
46.	RF Transducer Wiring	32
47.	TR, NW Transducer Wiring	33
48.	LT Transducer Wiring	34

1.1 GENERAL DESCRIPTION

The WebHandler™ tension controller automatically maintains tension of any continuous material at the value selected by the machine operator. It provides three basic functions:

The first function is performed by the tension amplifier, which supports all Dover Flexo Electronics tension transducers. (The transducers measure the actual tension in the web). It includes a regulated power supply to excite the transducers, an amplifier to boost the transducer output signal, and a calibration circuit to adjust the tension readout to display actual tension.

The second function is the tension regulator. It compares the output signal from the transducers with the signal from the AUTO Set potentiometer on the front of the WebHandler™ enclosure. If there is a difference, the regulator will either increase or decrease its output signal to equalize them. The tension amplifier is located on the front board and the tension regulator is located on the Control board. (See Figure 1 for board locations, and Appendix A for board views)

The third function is performed by the output circuit. It accepts the output from the tension regulator and actuates a brake, clutch, or DC drive which actually creates the tension in the web.

There is a location on the Control board for plug-in cards containing optional features.

1.2 OUTPUTS, VERSION OF CONTROLLER

The WebHandler™ controller is available with one of three outputs:

1. **Pneumatic output.** This is used to actuate any air operated brake or clutch. The standard version includes a servo valve and pressure regulator installed in an open back enclosure, plus a driver circuit card. An air filter may be supplied by the user and installed externally to the controller depending on the pneumatics chosen. The output range is 0.5 to 75 psi.(0.03 bar to 5.17 bar). WebHandler™ controllers having this module are designated **Version P**.

Another option for this version is the DVS (Dual Valve Servo). See Options, Section 1.6, for more details.

2. **High Voltage output.** This output circuit uses Silicon Controlled Rectifiers (SCR's) to produce a standard variable voltage of up to 90 volts DC to operate any electric brake or clutch, including eddy current clutches. 45 volt, and 24 volt outputs (24V not available with 230Vac input) are optional. WebHandler™ controllers having this output module are designated **Version V**.
3. **0-10Volt DC compensated output module.** This output is used to control DC drives or other variable speed drive systems. This output is isolated from earth ground to make it more compatible with all drives. WebHandler™ controllers having this output module are designated **Version D**.

All three versions supply a secondary control output of 4-20mA.

In addition to the standard enclosure, the WebHandler™ controller is available in an optional configuration called a Remote Panel. This is normally used by OEMs who wish to integrate the controller into their own electrical enclosures. See Section 1.6, Options for more info.

1.3 WebHandler™ EXPLODED VIEW

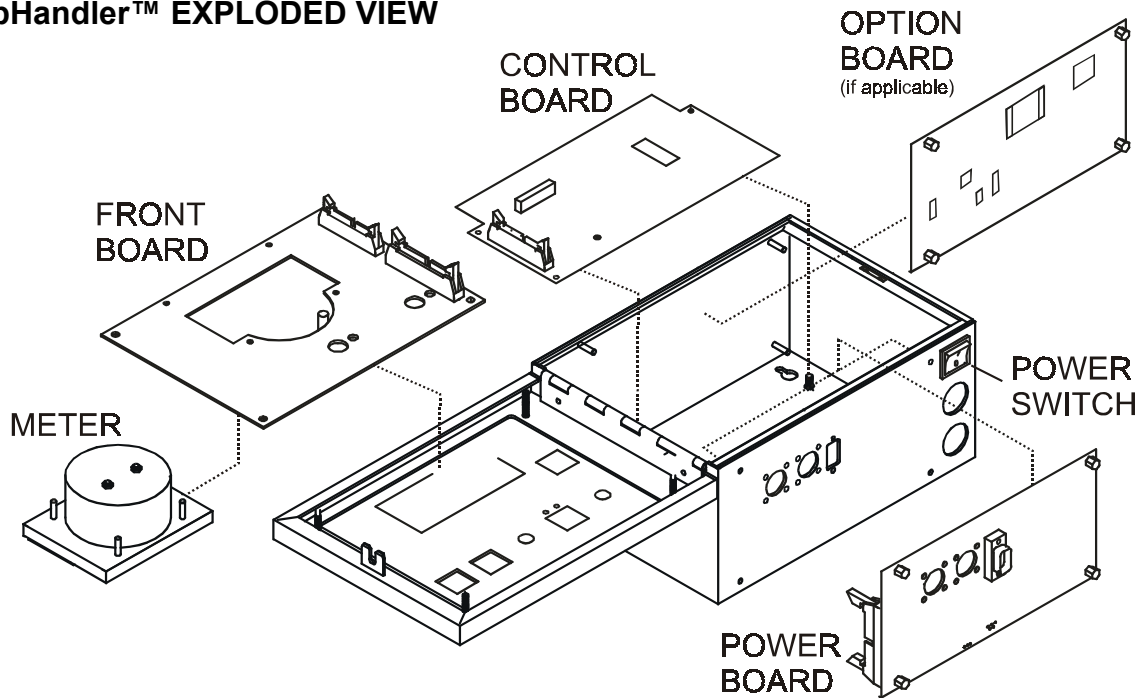


Figure 1 - WebHandler™ EXPLODED VIEW

1.4 SPECIFICATIONS (separated into Versions V, D, or P where applicable)

Power input:

P & D = 115/230 Volts 60/50Hz single phase @ 1 Amp

V = 115/230 Volts 60/50Hz single phase @ 6 Amps

Output:

P = 0.5 to 75 psi (0.03 to 5.17 bar)

V = 90, 45, or 24 Vdc, all @ 5 Amp w/115 Vac In **OR**
90 Vdc, 45 Vdc all @ 5 Amp w/230 Vac In

D = 0 to ±10 Vdc, Compensated (Optional Isolated)

P, V, D = 4-20mA Control Output Signal **AND**
choice of 0-10Vac or 0-1mA tension
indication to external device.

Enclosure:

Steel, powder resin painted, NEMA 1

Weight:

9 lbs. (4.1 kg)

Transducer Signal Accepted:

500 mVdc per pair at rated load

(1000 mV with XR option)

Mating Transducer Cable Connectors:

Amphenol MS3106A-10SL-3S

Zero (Tare) Range:

95% of transducer rating, minimum

Calibration Range:

25:1 max.

Temperature Range:

32° F to 104° F (0° C to 40° C)

System Accuracy:

within 1 - 3% typical

Tension Meter:

Analog, 2%, 1mA, 48 ohm

Output Range:

0-100% Max.

Manual Mode Output Range:

0-100% of rated output

Standard Tension Meter Scales:

0 - 1, 5, 10, 25, 50, 100, 150, 250, 500, 1000

Taper Tension Range (option):

0-100%

Taper Tension by Rider Roll / Diameter Sensor

0-10 Vdc input

Pneumatics:

1. Remote Pneumatic Enclosure (RPE)

Input: 125 psi Max.

Output: 0.5 to 75 psi (0.03 to 5.17 bar)

Servo Valve Drive Signal: 0-100mA

Air Connections: In = 1/4 NPT, Out = 1/8 NPT

Weight: 2.84 lbs. (1.28 kg.)

2. Dual Valve Servo Enclosure (DVS)

Power Input: 24Vac/dc @ 200 mA

Input: 100 psi (6.9 bar) Max

Output: 0 to 75 psi (0 to 5.17 bar)

Servo Valve Drive Signal: 1 - 5 Vdc

Air Connections: In = 1/4 NPT, Out = 1/4 NPT

Weight: 2.3 lbs. (1.04 kg.)

1.5 STANDARD FEATURES

SOME OF THESE FUNCTIONS REQUIRE CONFIGURING OR EXTERNAL WIRING. REFER TO SECTION 3 FOR CONFIGURING AND SECTION 2.6 FOR WIRING.

- **4-20mA CONTROL OUTPUT** for monitoring/recording of control signal.
- **AUTOMATIC CONTROL MODE.** The controller output is determined by the difference between web tension and the AUTO tension set pot. position. The internal regulator automatically varies the output as required to maintain set tension.
- **EMERGENCY STOP.** Controller immediately goes to full output, or minimal output, upon closure of an external contact. Normally full output is used on braked unwinds to stop the roll of material quickly, and minimum output is used for other applications.
- **EXTERNAL TENSION READOUT.** Jumper selectable 0-10Vdc or 0-1mA external meter or monitoring output. Buffered to prevent load from affecting controller.
- **MANUAL CONTROL MODE.** The controller output is determined only by the position of the MANUAL set knob. No change occurs unless the knob is turned. Used during machine set-up or during trouble-shooting.
- **METER CORRELATION ADJUSTMENT.** This causes the position of the AUTO set pot to correspond to the position of the needle on the analog tension meter. For example; if the AUTO set pot is set at 4 on its dial, the tension meter will read 40% of full scale. This is important for the proper operation of the controller. This is preset during factory setup and should not be tampered with. Call Tech Support prior to changing this.
- **METER DAMPING.** Eliminates vibration of the analog tension meter needle. Also minimizes flicker of the optional digital meter.
- **OUTPUT DIRECTION.** Select between standard and reverse output. Most applications use the standard selection where controller output goes up when tension falls below the set level. Reverse selection causes output to go down when tension falls below the set level. It is used in intermediate tension zones where the transducers are located after the nip rolls they control, and for driven unwinds.
- **POWER VOLTAGE SELECTION.** The WebHandler™ controller is designed to operate on two ranges of AC power; 110-120 Volts 60/50 Hz, and 220-240 Volts 60/50 Hz. A voltage selection switch on the Power Board selects between the two.
- **SERVO VALVE ASSEMBLY.** Standard for Version P. Allows servo valve to be installed close to the brake/clutch while the controller is located elsewhere. Includes servo valve, regulator, and bracket. See Options for alternative servo valve setups. .
- **SOFT START.** Used on braked unwinds. Actuated either automatically upon a loss of tension below the preset trip point (after an adjustable delay), or immediately upon an external contact closure. Controller output is reduced to a preset (user adjustable) low level to prevent brake lock-up when the machine starts. When tension rises above the trip point in automatic trip mode, the controller goes back to the automatic control mode. Unit remains in Soft Start while contact remains closed. Does not operate in the MANUAL control mode.
- **STATUS LIGHTS.** Show that particular functions are active when lights are illuminated.
- **TENSION DISPLAY.** Web tension is displayed on an analog meter which is calibrated to read out total tension in pounds, newtons, kilograms, or any other desired units. A digital meter is optional.
- **TENSION LIMIT SWITCH.** Both an LED and a relay are activated to alert operators to low tension condition.

1.6 OPTIONS

SOME OF THESE OPTIONAL FUNCTIONS REQUIRE CONFIGURING OR EXTERNAL WIRING. REFER TO SECTION 3 FOR CONFIGURING AND SECTION 2.7 FOR WIRING.

- **230 VOLT POWER (230).** 230 volt 50/60 Hz power input.
- **24V or 45V OUTPUT (24,45).** All for Version V only. 24V with 115Vac only.
- **ATTACHED POWER CORD (APC).** A heavy duty 3 conductor power cord wired to the unit .
- **DIGITAL METER (DM).** 4 full digits, red 1" high LED's with over and under range indicators. The maximum range is 0000 to 9999. An over-range indicator lights at values over 9999, and an under-range indicator lights at values below 0. Can be read from further away than the analog meter and is switchable to select fewer digits and decimals.
- **DUAL VALVE SERVO (DVS).** Version P only. Servo valve having two solenoid valves, plus a driver circuit board. A connection cable is also available. An air pressure regulator may be required, which may be supplied by the customer. An air filter is recommended, which may be supplied by the customer.
- **PNEUMATIC DRIVER CARD (DRVR).** Version P only. A driver circuit card for dual valve servo valves. Included with the DVS option for this controller where DFE supplies the servo valve.

- **EXTENDED RANGE (XRE).** The transducers are excited by 10 volts instead of the standard 5 volts. Used for low tension applications, or applications with very wide tension ranges. The transducers must also have the XR option.
- **AIR FILTER (FILT).** Air filter installed with servo valve, etc.
- **ISOLATED 10V OUTPUT (I10).** Isolates the output signal from ground or circuit common. Version D only. Recommended for all units connecting to drives or PLC's.
- **NONSTANDARD METER SCALE (NMS).** Any nonstandard analog meter scale. Either single or dual scale. See Specifications, page 2, for standard scales.
- **REVERSE OUTPUT (RO).** Increases output when tension exceeds set point, and decreases when tension drops below set point. Used in intermediate applications where transducers are located after the nip rolls being controlled by the transducers or for driven unwinds.
- **REMOTE OPERATOR PANEL CONFIGURATION (ROP).** This configuration consists of the Control, Power and Output boards mounted in a standard enclosure and the and Front board connected to the controller by a wire harness or ribbon cable. The Front board is mounted on a special steel panel. This arrangement permits installation of the controller inside another enclosure with the front panel mounted in a rectangular cutout in the face of the enclosure.
- **REMOTE TENSION AMPLIFIER (RTA).** The internal tension amplifier is bypassed and the tension signal is provided by an external remote device such as the FireGuard™. This allows use of special indicator functions, such as intrinsic safety, which are not available in the WebHandler™ controller.
- **REMOTE TENSION SWITCH (RTS).** Tension On/Off switch installed in remote enclosure, usually with servo valve.
- **SPEED FOLLOW (SFD).** This is a function normally used on Version WH-D controlling tension in an intermediate zone or surface driven rewinds and unwinds. The controller must be equipped with an optional Line Speed Follower board.
The Control board contains a regulator circuit, separate from the tension regulator, that accepts a line speed signal from a DC tach. The line speed signal causes the output of the controller to follow (go up and down with) line speed. The output of the tension regulator then trims the follower output as needed to maintain set tension.
- **TAPER TENSION (TTF).** For rewind applications. Causes tension to decrease as roll diameter increases. Helps produce a better quality roll by eliminating telescoping, crushed cores, too tight or too loose rolls. The methods available are rider roll or diameter sensor such as an ultrasonic device. The rider roll method without an ultrasonic unit requires a follower roll in contact with the rewinding roll, or some other roll-sensing device to detect the roll diameter. The device must have a 0-10 Volt DC output. Taper is adjustable from 0 to 100%. The taper circuitry is located on an option card which is plugged into the Control Board.

1.7 FRONT PANEL AND OPERATOR DEVICES

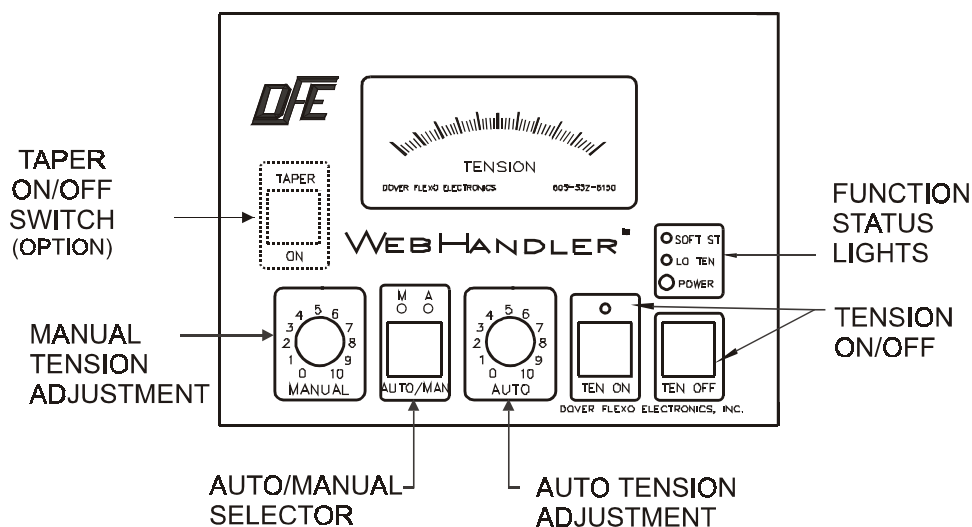


Figure 2 - FRONT PANEL and OPERATOR DEVICES

SECTION 2

INSTALLATION

2.1 DIMENSIONS OF STANDARD UNIT inches (mm)

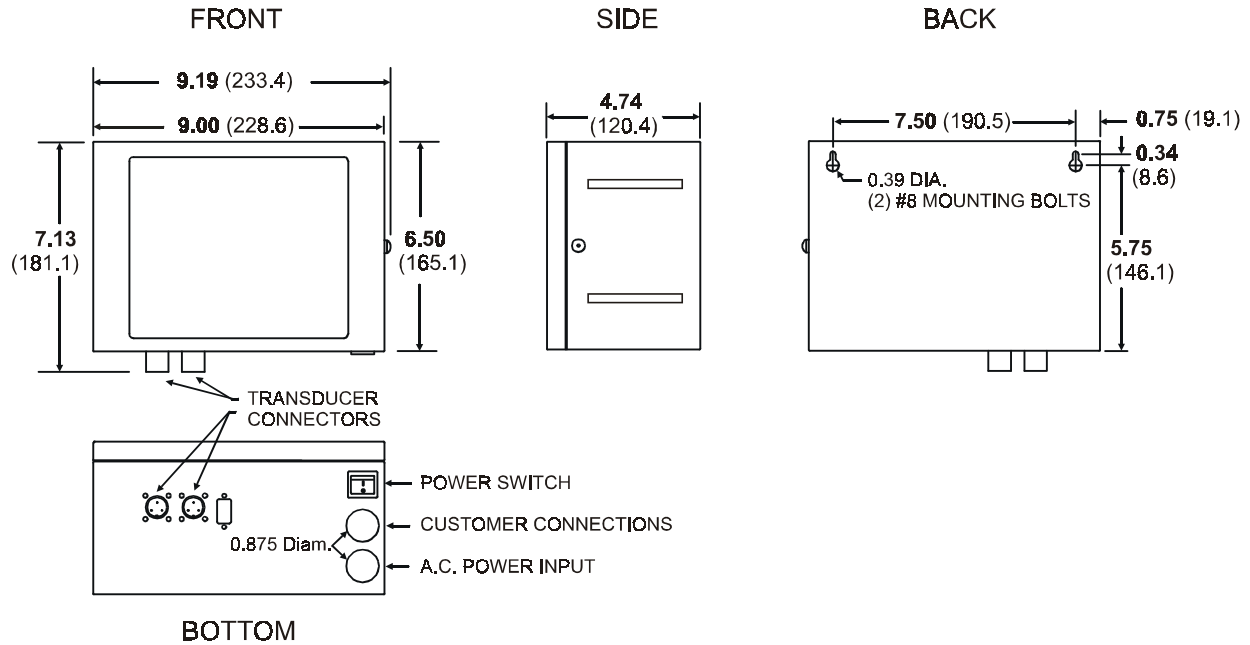


Figure 3 - STANDARD DIMENSIONS

DIMENSIONS OF REMOTE PANEL CONFIGURATION inches (mm)

Enclosure dimensions listed above.

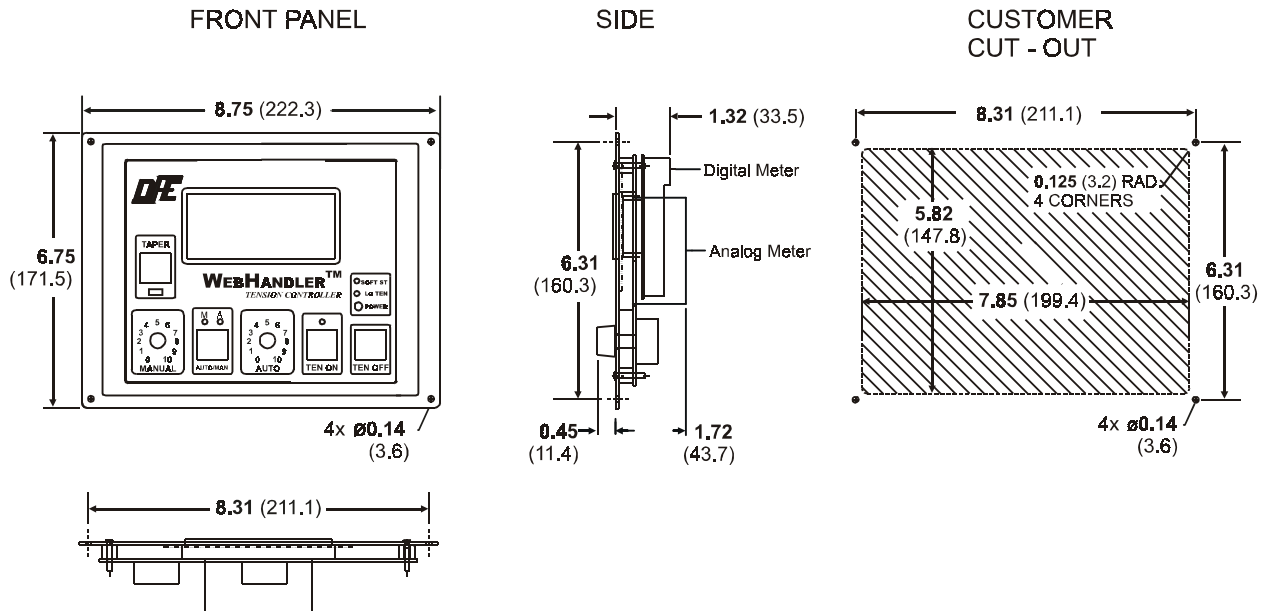


Figure 4 - REMOTE PANEL DIMENSIONS

DIMENSIONS OF REMOTE SERVO VALVE ENCLOSURE (WH2-P, Standard Pneumatics)

inches (mm)

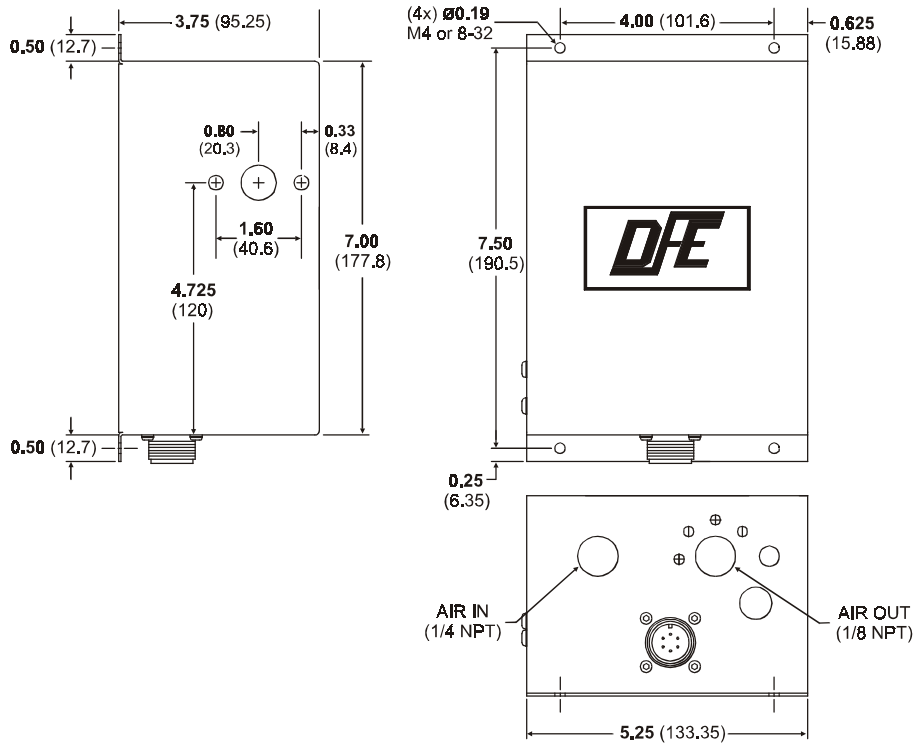


Figure 5 - DIMENSIONS OF SERVO VALVE ENCLOSURE

DIMENSIONS OF DUAL VALVE SERVO VALVE ENCLOSURE (WH2-P, Optional Pneumatics)

inches (mm)

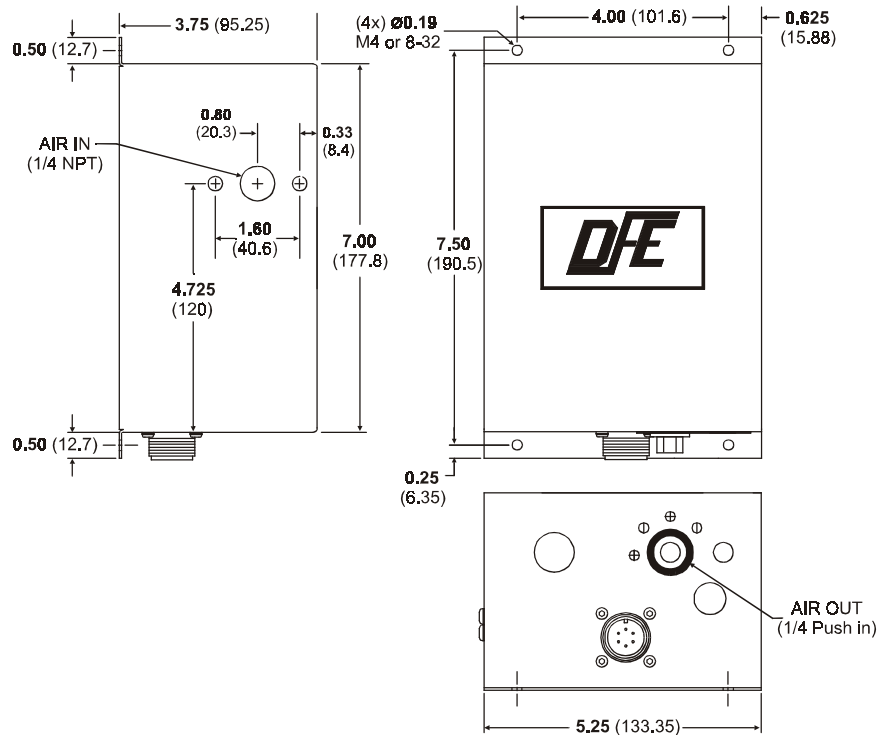


Figure 6 - DIMENSIONS OF DUAL VALVE SERVO VALVE ENCLOSURE

2.2 SELECTION OF A MOUNTING LOCATION

- 1. Mounting Location for Controller:** Select a location on the machine frame or a wall that will be convenient for the machine operator to operate the controller and to see the tension meter easily. Be sure the location is free of vibration, and is dry and clean. Take care to choose a place that the controller won't be struck and damaged by anything or anyone.
- 2. Mounting Location for Pneumatic Unit (WH2-P only):** The Pneumatic unit is designed for mounting close to your brake or clutch. They will therefore require shop air to be brought to their input, and the output is brought to the clutch or brake. In addition, a connection cable must be run between the pneumatic unit and the controller. Choose a location which is free from vibration. For more reliable operation, you should consider installing an inline filter assembly to keep oil and water from entering the pneumatic assembly.

2.3 INSTALLATION INSTRUCTIONS

- 1. Installation of Controller:** The enclosure is fastened to the mounting surface you have chosen by two socket head cap screws. Install the screws on the mounting surface to match the screw hole dimensions on the back surface of the WebHandler™ enclosure. See Section 2.1, Standard Dimensions. Leave them loose about 6 turns. Position the keyholes in the back panel of the enclosure over the screws and slide it down until it locks in place. The cover must be opened to tighten the mounting screws.

In addition to the standard enclosure, the WebHandler™ controller is available in optional Remote Panel configuration. Use the above instructions to install the enclosure part of the configuration. Then refer to Section 2.1, Remote Panel Dimensions. Use the dimensions shown to measure the cut-out and screw locations and mount with the appropriate fitting hardware.

- 2. Installation of Pneumatic Unit (WH2-P only):** This unit should be attached to your machine in the area of your clutch or brake. Drill four holes in a pattern 4" W x 7 1/2" H. Use four screws to attach the Pneumatic Unit to your machine. If you are using an oil and water filter, install it in close proximity to the Pneumatic Unit, following the instructions that come with the filter assembly.

2.4 POWER VOLTAGE

The WebHandler™ controller is designed to operate on either 115v-60Hz or 230v-50/60Hz power. Confirm that the correct voltage for your application has been selected. The AC voltage select switch is located on the power board. Slide switch to select 115 volts or 230 volts. Also verify that the correct fuses are used for the voltage you have selected. See figure below. **CAUTION! The wrong selection will damage the controller!**

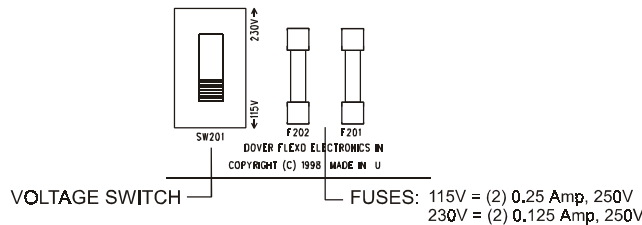


Figure 7 - POWER VOLTAGE SWITCH

2.5 TRANSDUCER EXCITATION

Confirm that the correct transducer excitation has been selected. 5 Volts is standard, 10 Volts provides a wider operating range. The transducer excitation select switch is located on the power board. **CAUTION - The transducers MUST have the XR option if you select 10 Volts! Otherwise damage will result!**

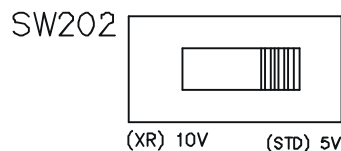


Figure 8 - TRANSDUCER EXCITATION SWITCH

2.6 STANDARD ELECTRICAL CONNECTIONS

Refer to the drawing below for electrical connections. If your controller has any optional equipment, refer to Section 3 of this manual for the appropriate connections.

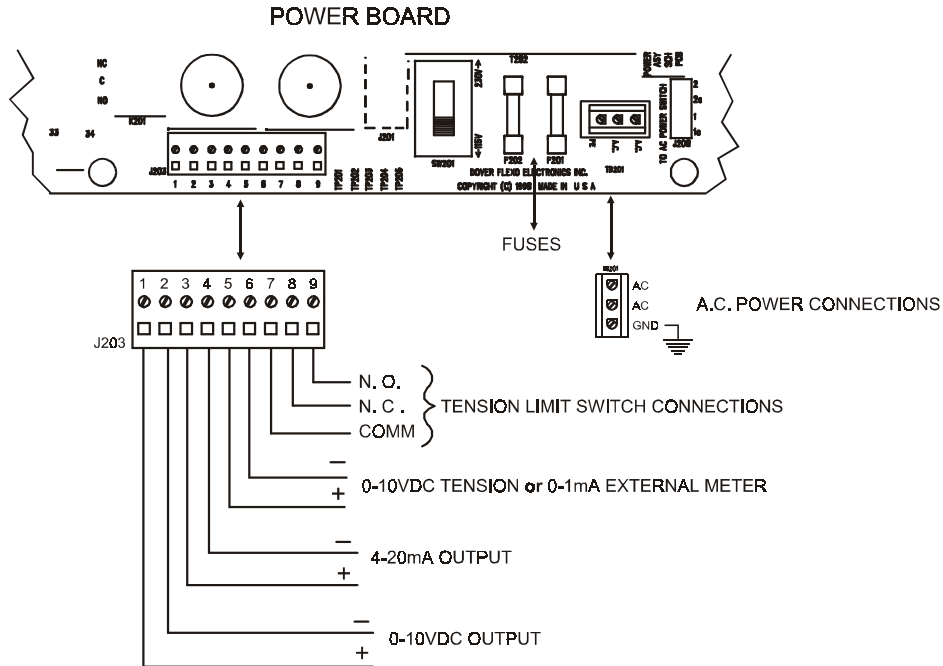


Figure 9 - ELECTRICAL CONNECTIONS

2.7 ELECTRICAL CONNECTIONS OF OPTIONS

The connections below are options that hook up to the control board. Some options also connect to their own boards. Refer to specific options in Section 3 for electrical connections and switch settings as well as the location of the connections.

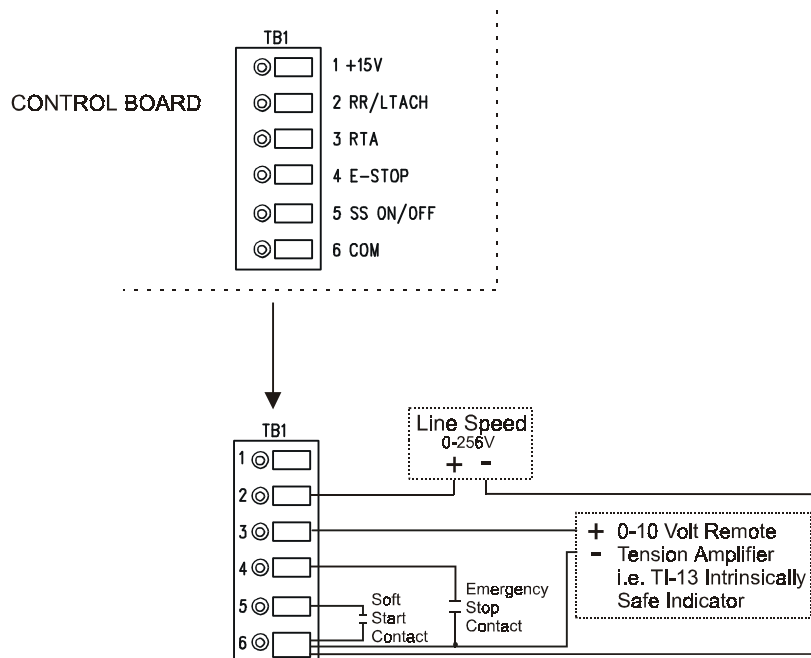


Figure 10 - ELECTRICAL CONNECTIONS OF OPTIONS

Your WebHandler™ controller has been properly configured at the factory. It should not be necessary to make any changes except tension calibration and PID tuning. Use this section to verify the configuration or to reconfigure the controller if your application requirements change.

3.1 MECHANICALLY ZERO THE TENSION METER

This step is only necessary if the tension meter needle does not rest on 0 when the controller power is turned off. Push the POWER button to turn off power to the controller. Open the controller cover so the front board is accessible. Turn the adjustment screw on the rear of the meter as required to set the meter needle at 0 on the scale. (See section 3.5 to calibrate the optional digital meter.)

Note for UPB-type transducers: As web tension is applied, the tension needle (or the reading on the digital meter) should increase. If it goes downward instead, you must reverse either the signal connections or the excitation connections. This can be done by removing the plugs from the standard connectors on the power board (J204 and J205), and using the reverse connectors (J206 and J207).

3.2 CALIBRATE THE METER FOR ACCURACY (Refer to Appendix A for Front Board.)

1. Find an object of known weight at least as heavy as 25% of the tension meter full scale number. (A spring scale can also be used). Get a length of rope, wire or cable about 15 ft. (3M) long.
2. If it has not been done already, open the controller cover so the front card is accessible.
3. Push the POWER button to turn on power to the controller.
4. Turn the CAL pot.(RT1) clockwise 5 turns (This makes the ZERO pot. setting more accurate). Turn the ZERO pot. (RT2) as required to set the meter needle at 0.
5. Fasten one end of the rope in the machine and thread the other end around the transducer roll in exactly the same path as the web will take. Be sure it does not pass around any driven rolls, drag bars, or anything else that can affect tension. Refer to figure below.

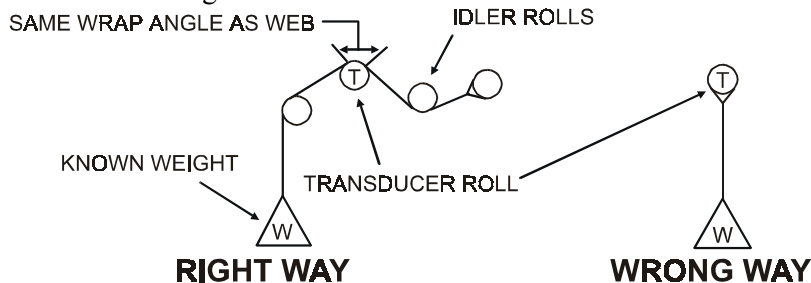


Figure 11 - WEB PATH FOR METER CALIBRATION

6. Attach the weight to the free end of the rope as shown above. Adjust the CAL pot. as required to set the meter needle at the value of the weight.
7. Remove the weight and observe the tension meter. If the needle is not on 0, adjust the ZERO pot. as needed. Repeat step 6.
8. Repeat steps 6 and 7 if needed. TENSION METER CALIBRATION IS COMPLETED.

3.3 METER DAMPING

This adjustment steadies the analog tension meter needle. It also works with the optional digital meter. Turn the MTR DAMPING pot. (RT3 on Front board) CW to stabilize the meter reading. This only affects the meter. The tension signal to the regulator circuit is not damped. Do not dampen the meter until the PID has been tuned. See Section 3.18.

3.4 10 VOLT OUTPUT

Three variations of control output are possible depending on the settings of S3 on the Control Board: 0 to +10 volts, -10 to +10 volts, and reverse acting output (+10V to 0). See Appendix A for S3 location on Control Board, and Appendix B for switch settings.

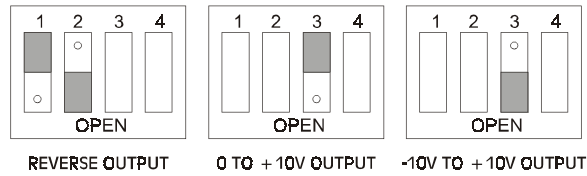


Figure 12 - 10 VOLT OUTPUT SWITCH SETTINGS

3.5 DIGITAL METER (Option - DM)

Before using the Digital Meter, it must be adjusted to accommodate the expected maximum tension. THIS HAS BEEN DONE AT THE FACTORY. NO CHANGES SHOULD BE NEEDED!

The calibration procedure is the same as for the analog meter. Refer to Section 3.2, previous page .

CAUTION: When setting the ZERO pot. pay attention to the under-range indicator. The correct setting is where the light just goes out as the ZERO pot. is turned clockwise.

OPTIONAL PROCEDURE TO RESET RANGE

The range of the Digital Meter is set at the factory, and is based on the maximum tension desired by the user. Use the following procedure to reset the range if you need to read higher, or much lower tension than the meter was originally set to read.

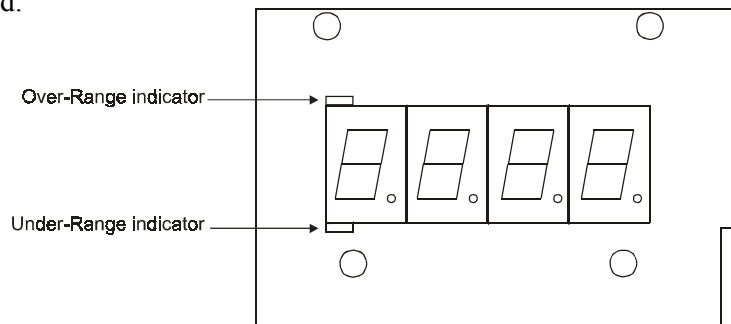


Figure 13 - DIGITAL METER DISPLAY

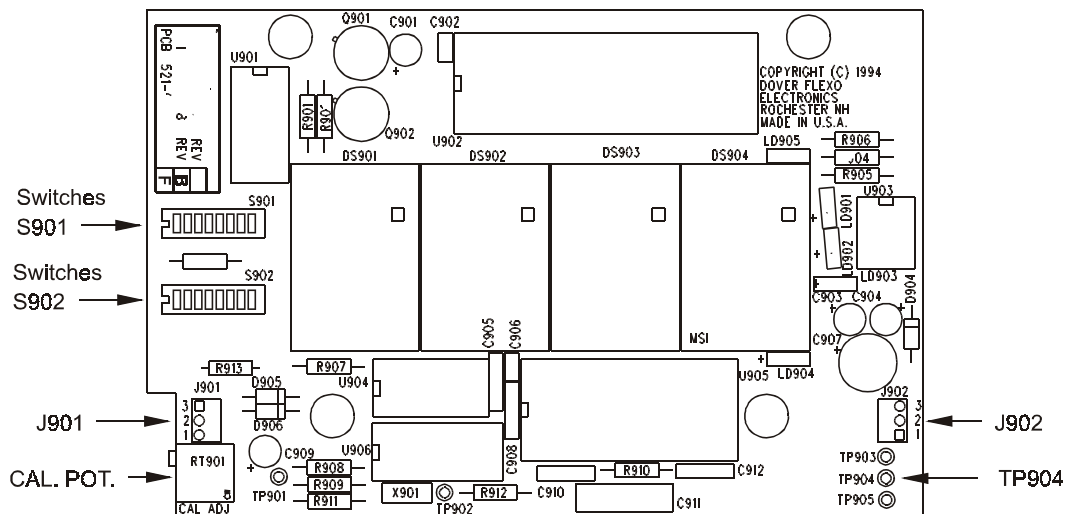


Figure 14 - DIGITAL METER CARD

1. Determine the maximum tension to be used. Refer to Specifications, Section 1.4, and select the next highest analog meter scale.
2. Determine the number of decimal places for the display. Unless the full-scale tension is very low, it is best to use no decimal places. This produces a stable display.
3. Turn off power. Loosen the enclosure cover screws and open the cover to expose the back side of the Digital Meter. Set the S901 and S902 switches as follows:

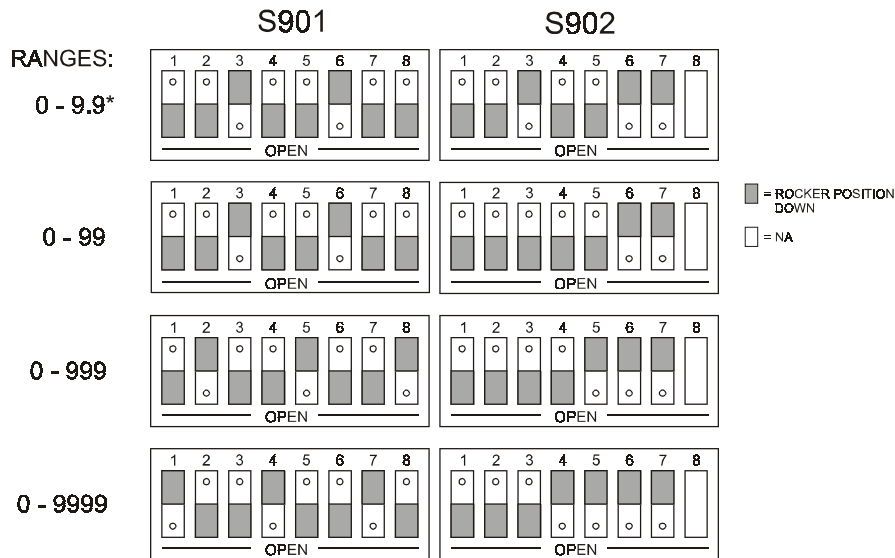


Figure 15 - DIGITAL METER SWITCHES

* Use this range only if you really need the decimal point. Otherwise, use the 0-99 range settings.

4. Measure the input voltage to the digital meter at TP1 (+) on front board, and test point TP2 (-).
5. Adjust the ZERO pot. on the Control board for 10VDC at the points in 4. above.
6. Adjust the CAL ADJ pot. (RT901) to set the Digital Meter to the full-scale value selected.
7. Calibrate the meter according to the procedure in Section 3.2 **CAUTION:** When setting the ZERO pot. pay attention to the under-range indicator. The correct setting is where the light just goes out as the ZERO pot. is turned clockwise.

3.6 EMERGENCY STOP

An external contact is required. The controller will be in the Emergency Stop mode as long as the contact is closed. Switch S2 settings below determine if tension is turned off or left on during E-Stop. If tension is turned off then the Tension ON button will have to be pressed to restart. Also works in the MANUAL control mode.

1. Connect the external contact as shown below. TB1 is on the Control Board.



2. Set the S2 switch as follows:

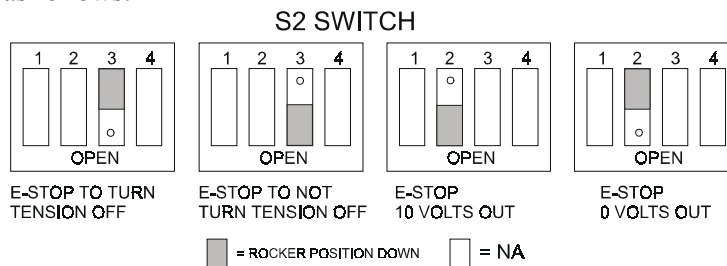


Figure 16 - E-STOP ELECTRICAL CONNECTIONS & SWITCH SETTINGS

3.7 EXTENDED RANGE (Option - XRE)

Select between 5V and 10V excitation for the tension transducers. 10 Volts provides a wider operating range. SW202 is located on power board. **CAUTION - The transducers MUST have the XR option if you select 10 Volts! Otherwise they will be damaged.**

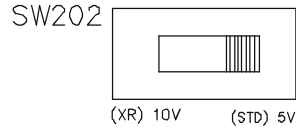


Figure 17 - SELECT TRANSDUCER EXCITATION VOLTAGE

3.8 HIGH VOLTAGE OUTPUT (WebHandler™ Version V only)

The high voltage output (V-out) board is located in the top of the enclosure. This circuit contains the SCR bridge and driver circuitry to produce the output voltage of the controller. It is designed to operate with either 115V or 230V input power and to produce 90Vdc, 45Vdc, or 24Vdc outputs. To connect this option, see TB1 on the upper right corner of the V-out board. It is labeled “output”. The (+) output is on the right and the (-) is on the left. Connect your electric clutch or brake to this terminal block using shielded wire. Connect the shield to a ring terminal and install it at the PCB mounting hole near the terminal block.

1. To select the input and output voltages, set the SW1 switch on the V-Out Board as follows:

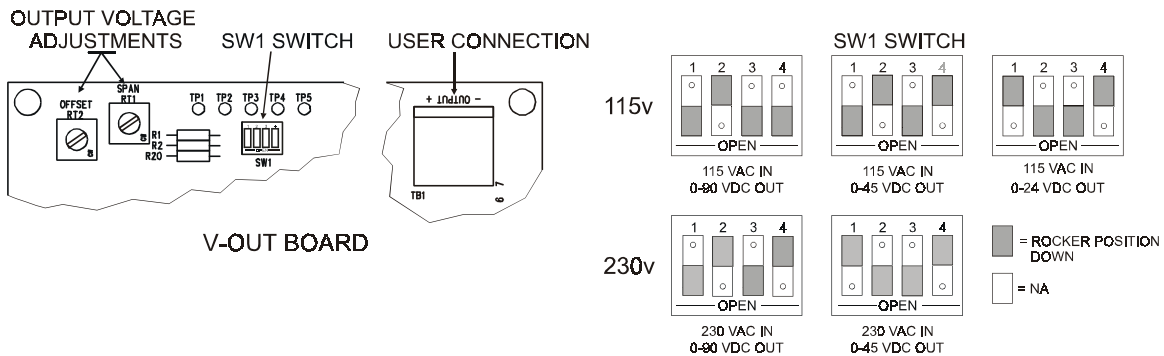


Figure 18 - HIGH VOLTAGE OUTPUT SWITCH SETTINGS

The SPAN and OFFSET pots (RT1 and RT2 on V-Out board) are set at the factory and should not require any adjustment. If their settings have been changed, reset them as follows.

2. Turn power on. Turn Tension on. Switch to MANUAL control mode. Turn the MANUAL pot all the way counter-clockwise. Connect a voltmeter to the controller output terminals along with your brake or clutch.
3. Turn both SPAN and OFFSET pots to midpoint. Observe the voltmeter and turn the OFFSET pot (RT2) slowly counter-clockwise until the voltmeter reads 0.
4. Turn the MANUAL pot fully clockwise. Turn the SPAN pot (RT1) counter-clockwise until the voltmeter reads the output selected in step a) above. Repeat steps 2 through 4 adjusting offset and span pots. as needed.

3.9 ISOLATED 10V OUTPUT (Option - I10, D Version)

The isolated output card is located on the inside top of the enclosure. Make isolated output connections as shown below:

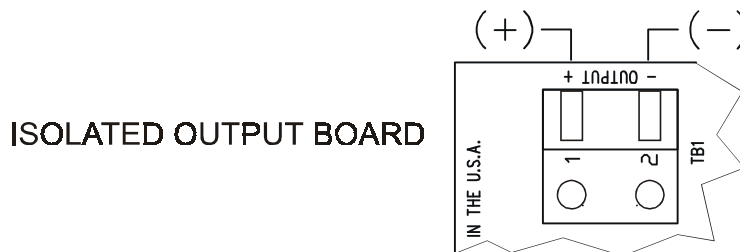


Figure 19 - 10V ISOLATED OUTPUT CONNECTIONS

3.10 LINE SPEED FOLLOW (Option - SFD, Requires Line Speed Option board)

Make electrical connections and set switches as per the following drawings, then calibrate with the following procedure.

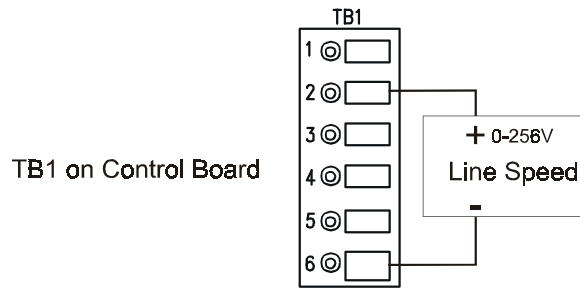


Figure 20- LINE SPEED FOLLOWER ELECTRICAL CONNECTIONS

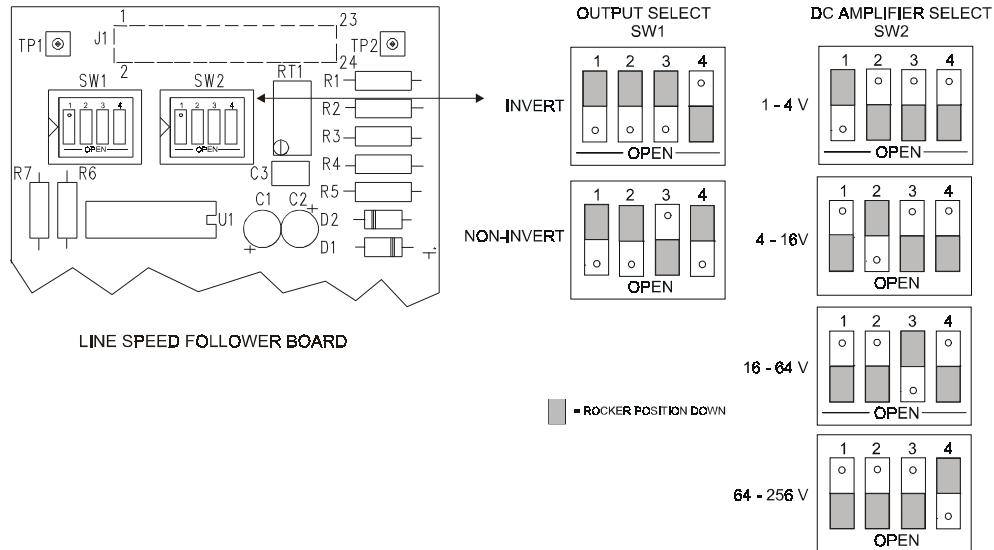


Figure 21 - LINE SPEED FOLLOWER SWITCH SETTINGS

Calibration procedure for using the line speed follower option:

1. Connect the input from your line speed source as shown in Figure 20.
2. Run the machine with no web at a known portion of full speed, i.e. 50% or 100%.
3. Measure the input voltage and set the SW2 Amp select switch for the maximum value at maximum speed of the machine. If running at 50% max. speed, multiply the value measured by 2.
4. Measure TP1(+) and TP2 (-) on the line speed board. Set pot RT1 on the line speed board to the percentage of line speed multiplied by 10Vdc, i.e. if running at 50%: 50% x 10V = 5 Vdc.
5. Set the Tension Trim pot (RT7 on Control Board) to Full CCW.
6. Verify S3 rocker 3 is Open, and S3 rocker 4 is closed on the Control Board.
7. Measure the roll surface speed of the line drive nip using a hand tach. Record this speed.
8. Measure the surface speed of the roll controlled by the WebHandler.
9. Turn tension ON, Auto mode and Auto setpot as desired.
10. Adjust RT1 on the Line Speed Follower board to match the speed with the value recorded in Step 7.
11. Set tension trim between 10% and 20%. This should allow sufficient correction signal.

NOTE: Tension transients and instability can be caused by too high a setting on the Tension trim pot.

12. The line speed follower function is now calibrated.

3.11 METER CORRELATION

THIS HAS BEEN ADJUSTED AT THE FACTORY. METER CORRELATION SHOULD ONLY REQUIRE ADJUSTMENT IF IT WAS INADVERTENTLY CHANGED.

This function matches the signals from the AUTO set pot. and the transducers. If set too low, the controller goes to full output. If too high, there is no output.

1. Be sure the tension meter has been properly calibrated (refer to Section 3.2). Set the AUTO set pot. fully CCW. Remove the web from the transducer roll so the tension meter reads 0. Set the GAIN pot (RT2 on Control Board) to 100% (fully clockwise). Measure the voltage between test points TP11 (-) and TP5 (+). Set the METER CORR pot.(RT3) to 1.0 Vdc. Return the GAIN pot to its original setting.
Run the machine. If the correlation between the tension meter and the AUTO pot is satisfactory, quit here. If not, proceed to Step 2.

WARNING: If this adjustment is made too quickly or in too large an increment, a web break may occur!

2. Run the machine at normal speed, with any normal tension showing on the meter. Be sure the controller is in the AUTOMATIC control mode. Note the position of the AUTO pot. If it is lower than the meter needle position, on a % basis, turn the METER CORR pot. (RT3) clockwise a small amount (If higher, turn it counterclockwise). Then turn the AUTO pot. to return to the original tension. Repeat this procedure using small adjustments so as not to disturb the web too much, until the positions of the AUTO pot. and the meter needle are the same, on a % basis. That is; if the AUTO pot. is at 5, the meter needle should be at 50% of full scale.

3.12 PNEUMATIC OUTPUT / REMOTE PNEUMATICS IN ENCLOSURE

(Version P only with DFE Pneumatics. See Appendix A for boards)

No adjustments are necessary if factory assembled. See Section 1.4 for specifications, and Section 2 for dimensions.

1. Remote Pneumatic in Enclosure (RPE). Standard with P version.

- a. Make sure the pneumatic unit is mounted securely and that the connecting cable is attached to both the controller and the pneumatic unit as specified in section 2.3.2. See electrical connections in Figure 22.

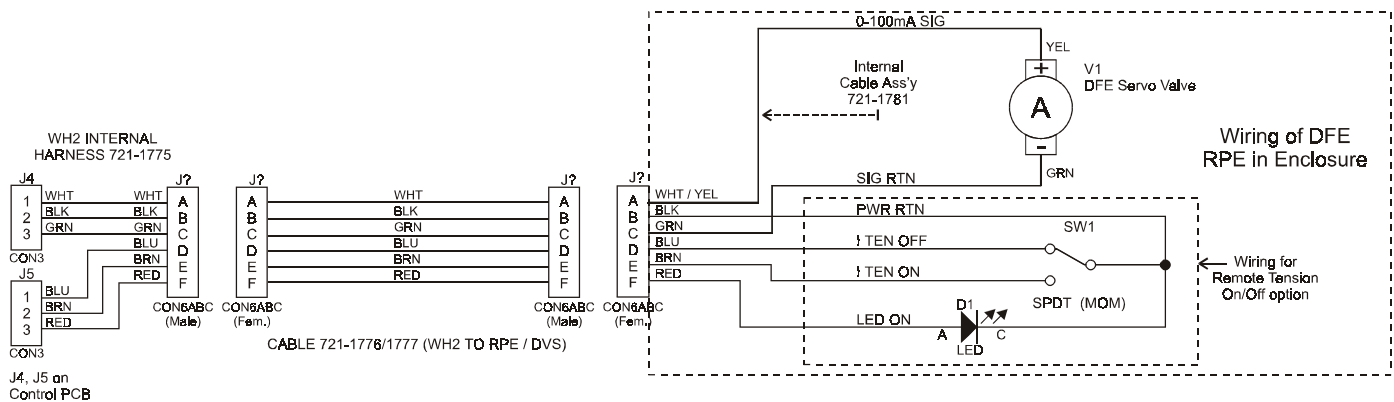


Figure 22 - REMOTE PNEUMATIC CONNECTIONS

- b. Obtain one 1/4 NPT fitting (air in) and one 1/8 NPT fitting (air out) to insert into the threads in the input and output openings at the bottom of the unit. The other end can be barb, fast-disconnect, or anything else you may need to adapt to the hoses you are using. Make sure the shop air provided to this pneumatic unit is dry and that the air pressure is no more than 125 psi. For more reliable operation you should consider installing an inline filter assembly to keep out oil and moisture. Attach the hoses to the unit making sure there are no leaks. Attach output hose to brake or clutch making sure hose does not contact any moving parts on machine.

THE FOLLOWING ADJUSTMENT IS PRE-SET AT THE FACTORY. THE INFORMATION IS PROVIDED SHOULD YOU WISH TO CHANGE THE MAX. PRESSURE OUTPUT TO A LOWER VALUE. AN EXAMPLE OF 75 PSI IS GIVEN BUT YOU CAN SET TO YOUR DESIRED PRESSURE. NOTE: OPERATION ABOVE 75 PSI MAY BE DEGRADED.

- c. Check unit for proper operation. Connect a pressure gauge to the controller output. Set the external air pressure regulator to 80psi (5.5 bar). Select MANUAL mode of operation. Set the MANUAL pot to full clockwise. If the output is not 75 psi, adjust pot RT12 on the Control board. Set the pot to give 75 psi. It is normal for the sound of the exhaust port to change as the output varies.

2. Non-DFE Servo Valve and Drive Circuit (DRVR) or Dual Valve Servo (DVS). Optional with P version.

The Non-DFE servo valve driver option (DRVR) allows the customer to purchase a servo valve of their own choosing. DFE provides a driver module (printed circuit card) that provides a regulated +15Vdc @250mA or 24Vac to power a valve, plus optional signal outputs of 0 to +10Vdc @ 2mA, or 4 to 20mA to drive (control) the servo. This driver card is mounted to the top inside of the unit.

The DVS option also includes an alternative servo valve as part of the package.

a. If you have the “DVS” option:

1. Make sure the pneumatic unit is mounted securely and that the connecting cable is attached to both the controller and the pneumatic unit as specified in section 2.3.2. See electrical connections in Figure 23.

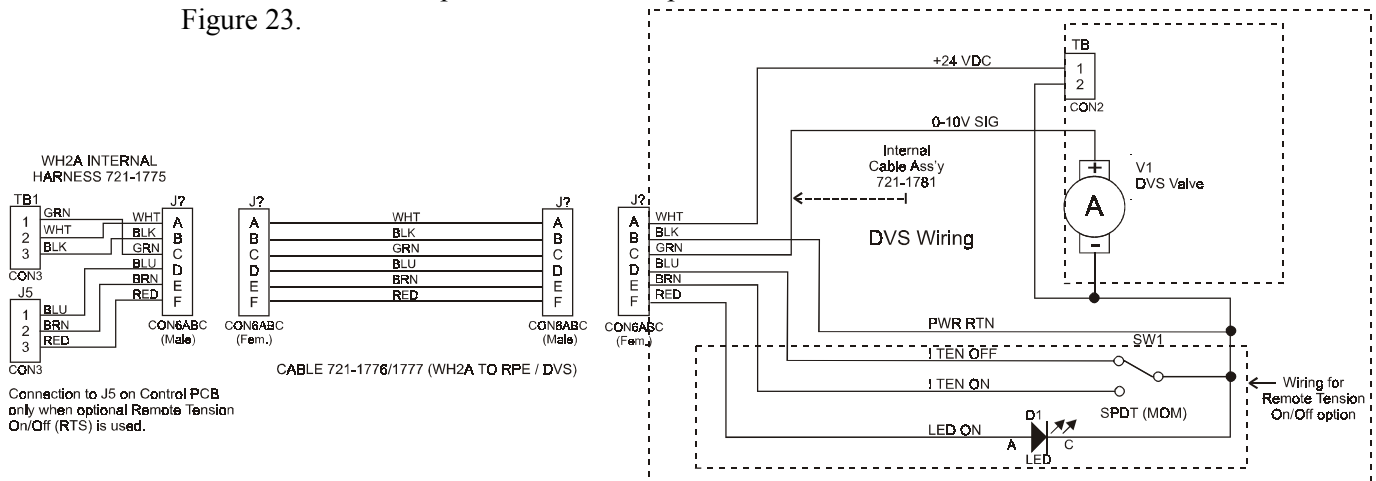


Figure 23 - NON-DFE PNEUMATIC DRIVER / DVS CONNECTIONS

2. Obtain two 1/4 NPT fittings (air in and out) to insert into the threads in the input and output openings at the bottom and side of the unit. The other end can be barb, fast-disconnect, or anything else you may need to adapt to the hoses you are using. Make sure the shop air provided to this pneumatic unit is dry and that the air pressure is no more than 125 psi. For more reliable operation you should consider installing an inline filter assembly to keep out oil and moisture. Attach the hoses to the unit making sure there are no leaks. Attach output hose to brake or clutch making sure hose does not contact any moving parts on machine.

THE FOLLOWING ADJUSTMENT IS PRE-SET AT THE FACTORY. THE INFORMATION IS PROVIDED SHOULD YOU WISH TO CHANGE THE MAX. PRESSURE OUTPUT TO A LOWER VALUE. AN EXAMPLE OF 75 PSI IS GIVEN BUT YOU CAN SET TO YOUR DESIRED PRESSURE. NOTE: OPERATION ABOVE 75 PSI MAY BE DEGRADED.

3. Check unit for proper operation. Connect a pressure gauge to the controller output. Set the external air pressure regulator to 80psi (5.5 bar). Select MANUAL mode of operation. Set the MANUAL pot to full clockwise. If the output is not 75 psi, adjust pot RT1 on the Driver board. Set the pot to give 75 psi. It is normal for the sound of the exhaust port to change as the output varies.

b. If you have the “DRVR” option:

1. Select desired output, 0 to 10V or 4 to 20mA by positioning the jumper on JP1 of the driver card. The jumper should cover pins 1 and 2 for 0 to 10V output, or pins 2 and 3 for 4 to 20mA output.

 


Figure 24 - NON-DFE DRIVER OUTPUT JUMPERS

2. If +24Vac is required for servo, position jumpers on pins 1 and 2 on JP2 and JP3. Default is +15Vdc.

 


Figure 25 - NON-DFE DRIVER VOLTAGE SELECT JUMPERS

3. For RPE, Drive Circuit (DRVR) or Dual Valve Servo (DVS).

- a. For 0-10V ONLY: Adjust RT1 (SPAN) on the Control board fully clockwise. Refer to pneumatic valve manufacturers instructions for calibration.
- b. For 4-20mA: Refer to pneumatic valve manufacturers instructions for calibration.
- c. Attach air hoses to your pneumatic valve per manufacturers instructions.

3.13 REMOTE TENSION AMPLIFIER (Option - RTA)

The S1 (on control card) switches must be set for the presence or absence of the Remote Tension Amplifier option. A two conductor cable supplies the 0-10Vdc tension signal from the remote device to TB1 pins 3(+) and 6(-) on the Control Board. The meter in the controller is fed from the remote device signal, and it is calibrated by the ZERO and CAL pots. of the remote amp. Switch S1 must be set to accept the tension signals from either the local amplifier or the remote one.

1. Set the switch as follows:

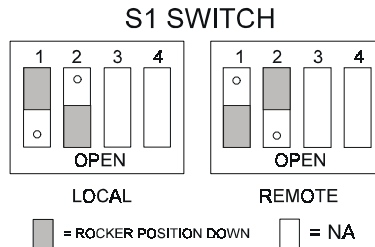


Figure 26 - REMOTE TENSION AMP SWITCHES

2. Make connections at the terminal block on the Control board as shown in the following figure.

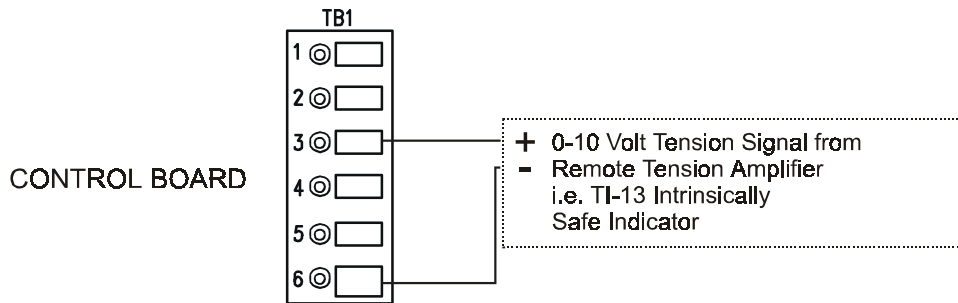


Figure 27 - REMOTE TENSION AMP CONNECTIONS

3.14 REVERSE OUTPUT (Option - RO)

Reverse output is used only when the tension transducers are installed after (downstream of) a driven nip which they control. Set the S3 switch on the control board as follows:

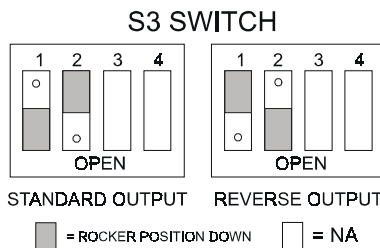


Figure 28 - REVERSE OUTPUT SWITCH SETTINGS

3.15 SOFT START

Soft start is used only in braked UNWIND zone applications. Turn off soft start when the controller is being used to control rewind or intermediate tension because it serves no purpose and it may not be possible to leave soft start. Soft start can be actuated in one of two ways; 1. by sensing a loss of tension, 2. by closure of an external contact.

1. **Actuation by low tension.** This is the standard configuration.

- a. No external electrical connections are needed for actuation. Set S2 (on control card) switch as in Fig. 29.

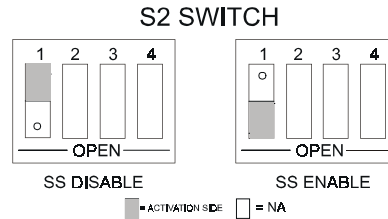


Figure 29 - SOFT START BY LOW TENSION SWITCH SETTINGS

If Soft Start is set ON, proceed to Step b, otherwise quit here.

- b. Set the SS OUTPUT pot. (RT6) for the output you want while in Soft Start. The range is about 0 to 100% of maximum output. Turn the pot. CW to increase output. It is best to set it low, but high enough to produce enough tension to exceed the trip point tension or the controller may not be able to get out of Soft Start. Factory preset is 20% of full output.
- c. Set the SS DLY pot. (RT11) for a short time delay before Soft Start actuates. This eliminates nuisance actuation if tension drops for only a short time. The range is about 0 to 3 seconds. Turn the pot. CW to increase the delay. There is no delay when leaving the Soft Start mode.
- d. Set the SS TRIP pot. (RT10) to the tension which will actuate Soft Start. The range is about 0 to 100% of the tension meter scale. Turn the pot. CW to increase the trip point. Avoid setting the trip point close to your operating tension. Set it much lower, instead. Be sure the SS OUTPUT pot.(RT6) is set high enough to produce enough tension to exceed the trip point tension. Factory preset is 10% of the tension meter scale.

2. **Actuation by external contact closure.**

- a. Connect the external switch or relay contact as shown. The controller will remain in the Soft Start mode as long as the contact is closed. TB1 is on the Control Board.

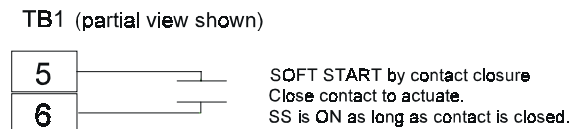


Figure 30 - SOFT START BY EXTERNAL CONTACT CONNECTIONS

- b. Set the S2 switches as follows to prevent Soft Start activation by tension.

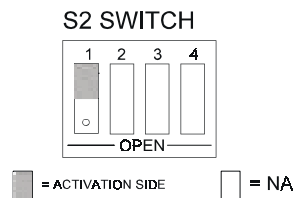


Figure 31 - SOFT START BY EXTERNAL CONTACT SWITCH

- c. Set the SS OUTPUT pot.(RT6) for the output you want while in Soft Start. The range is about 0 to 100% of maximum output. Factory preset is 20% of maximum output Turn the pot. CW to increase output. Avoid setting the output higher than the operating tension. It is best to set it low, but high enough to produce enough tension to create a smooth takeoff.
- Soft Start actuates immediately upon contact closure. There is no time delay. There are no other adjustments.

3.16 TAPER TENSION / 10 VOLT TAPER CARD (Option - TTF)

When used, this card is installed on the Control board. The card requires either a rider roll operating a potentiometer or some other device capable of sensing rewind roll diameter and having a 0 to +10 Volt DC output. The rider pot. must have a resistance of at least 10,000 Ohms if used.

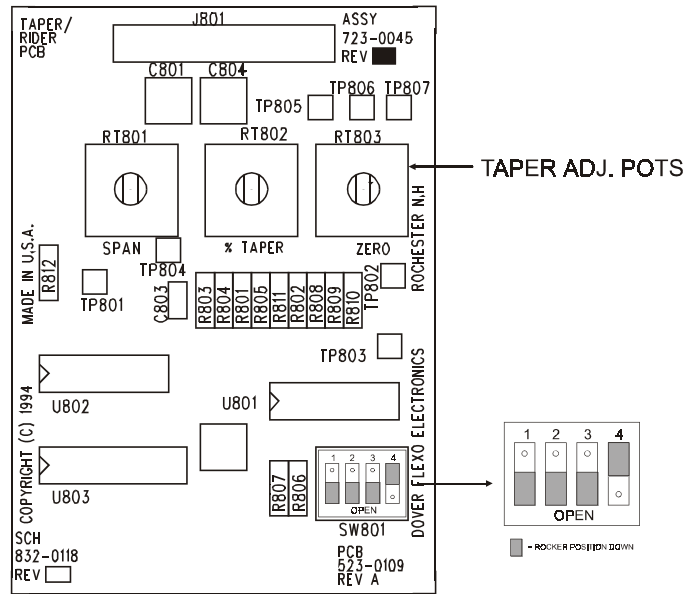


Figure 32 - TAPER TENSION RIDER OPTION CARD

1. Connect the rider roll pot. or voltage source as shown below. TB1 is on the control board. Sensor output should be +10Vdc at core and decrease with diameter build-up. You must supply the 5k resistor and the rider pot must be 10k.

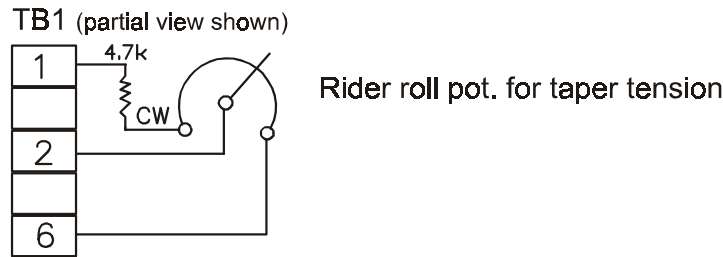


Figure 33 - RIDER ROLL CONNECTIONS

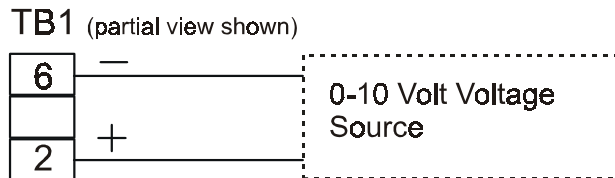


Figure 34 - 10 VOLT SOURCE CONNECTIONS

2. Cause the diameter sensor to put out a voltage signal corresponding to the core diameter (10V or high). Measure voltage between test points TP801 (+) and TP807. Adjust the SPAN pot. (RT801) for 10 volts DC.
3. Cause the diameter sensor to put out a signal corresponding to the full roll diameter (0V or low). Measure the voltage between test points TP801 (+) and TP807. Adjust the ZERO pot.(RT803) for 0 volts DC.
4. Recheck the voltage at core and adjust if necessary.
5. These settings should produce 0 Vdc at core and +10 Vdc at full roll as measured at test points TP803 (+) and TP807 when the TAPER pot.(RT802) is fully clockwise.
6. Finally, adjust the TAPER pot. to the amount of tension decrease desired. When the pot. is at 100, tension remains constant from core to full roll. When it is at 0, tension decreases linearly from the set level at core to 0 at full roll.

3.17 TENSION LIMIT SWITCH

TLS (Tension Limit Switch) is a standard feature in the WebHandler™. This feature monitors tension and activates a Relay (K201, located on the Power Board) when tension falls below a pre-set (Adjustable) trip point. This feature could be used as a Web Break Detector.

The trip point is adjusted by turning pot (RT9) located on the Front Board. For ease of adjustment, the operator can view the adjustment on the Tension Meter by enabling or disabling S1 also located on the Front Board.

S1 is a four position Dip Switch which can be configured to Enable or Disable TLS, Enable or Disable the TLS Relay, and view the trip point adjustment, as stated above.

There is one more adjustment for TLS, and that is the “TLS Delay” feature. This adjustment (Adjust RT8, on Front Board) provides a delay (0-5sec.) before activating TLS if tension falls below the pre-set trip point. Used to eliminate most nuisance tripping.

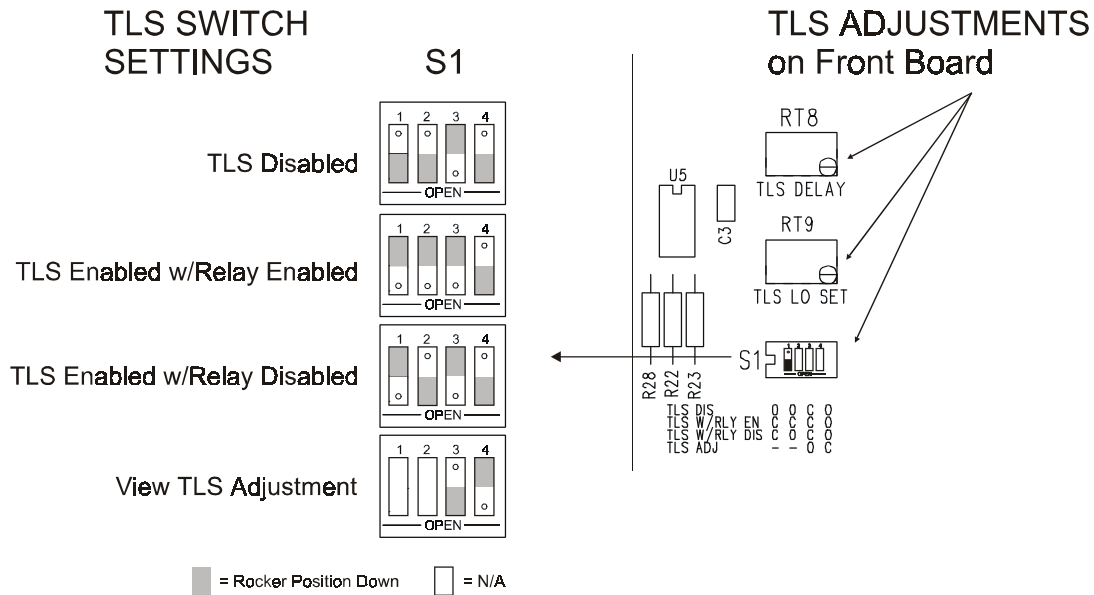


Figure 35 - TENSION LIMIT SWITCH SETTINGS

3.18 TUNING ADJUSTMENTS

1. DESCRIPTION OF ADJUSTMENTS

The procedures in this section apply to all versions of WebHandler™ controllers, used in all tension zones. Unlike most of the adjustments for standard features and options, tuning adjustments can not be preset at the factory.

There are three tuning adjustments; GAIN, STABILITY, and RESPONSE. These adjustments are located in the center of the control board.

- a. The GAIN pot. determines the sensitivity of the controller. A low setting will produce a small output change upon a tension error and a high setting will produce a large output change. Thus, if GAIN is set too low the running tension may be different from the set tension. If set too high, the controller may be unstable. A normal setting would be a low 5 - 10%.
- b. The STABILITY pots. (coarse and fine adjustments are provided) provide variable amounts of damping. If set too low, the controller may be unstable. If set too high, the controller may ignore some tension variations instead of correcting for them, and the controller may appear to be very slow to react. These are normally set mid range.
- c. The RESPONSE pot. adjusts the controller's reaction time when a tension variation occurs. If set too high, the controller may be unstable. A normal setting would be a low 0-10%.

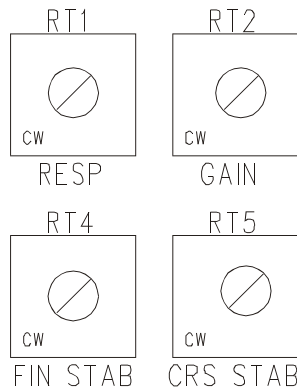


Figure 36 - TUNING ADJUSTMENT POTS

2. TUNING PROCEDURE

- a. Be sure the tension meter is calibrated properly (see Section 3.2). The controller may be impossible to tune if the meter is not calibrated.
- b. Set the pots. as shown below. Most systems will run steadily with these initial settings. On the pots; 0% is at the fully counterclockwise position and 100% is fully clockwise. They turn 270° - Do not turn past limits!

RESPONSE -----	10%	GAIN -----	10%
STAB (FIN) -----	50%	STAB (CRS) -----	50%
- c. Turn the controller on and switch to the AUTO mode. Web-up the machine with a typical web material. Run the machine at normal operating speed. Use the AUTO pot. to set the tension at a normal value for the material.
- d. Adjust the STAB (CRS) pot. slowly up and down while watching the tension meter. Wait for a short time after each adjustment for tension to stabilize. Choose the setting where tension fluctuations are the least. Fine tune using the STAB (FIN) pot.

Note: If the controller is controlling rewind tension, try to make these adjustments at or near core diameter. For an unwind controller, make it at or near full roll diameter. These are the points where the setting is most crucial.

- e. Accelerate and decelerate the machine while watching the tension meter. If tension oscillates, readjust the STAB (CRS) pot. Then adjust the RESPONSE pot. to minimize the time needed for tension to return to the set value. Very low response values are normal on most equipment.
- f. Run a full roll of material starting at the core (rewind) or full roll (unwind). Record the starting tension. At the end of the roll, record the ending tension. If it is lower or higher than the starting tension, GAIN is set too low. Increase the setting and repeat steps d, e, and f.

NOTE: It is usually not a good idea to use the GAIN pot to achieve stability. Use the STAB pot. instead. The purpose of the GAIN pot. is to ensure that the actual web tension is the same as the set tension, regardless of roll diameter or machine speed. However, if GAIN is set higher than is necessary to achieve this, it may require greater stability to reduce its effect.

SECTION 4

OPERATING INSTRUCTIONS

Once the unit has been installed and electrical connections have been made, turn on the power using the Power On/Off switch located at the bottom of the enclosure. Wait for five minutes for the unit to warm up and for the power supplies to stabilize. If you have not zeroed and calibrated the unit, do so now (refer to Section 3). Once the unit has been zeroed and calibrated, the user can choose which features to use. Refer to Section 3 to configure the particular feature you wish to use. If any of the features do not seem to work correctly, refer to Section 7 for troubleshooting hints or call Dover Flexo Electronics Technical Service. at 603-332-6150.

Set the auto setpot to the desired tension range. Select auto mode. Turn tension on and start the machine. Slowly adjust the auto setpot to achieve the desired running tension. Rapid changes of the auto setpot can induce undesirable tension oscillations.

SECTION 5

CARE AND MAINTENANCE

It is not necessary to perform any type of maintenance on the controller. However, you may find it worthwhile to observe whether there is a buildup of dust, debris, or moisture on or near the unit after a period of time. If so, you may consider moving the unit or putting the unit in an enclosure more suited to your particular environment. Washing the exterior of the unit may be done using warm water and a mild detergent on a cloth. Disconnect ac power prior to washing, do not spray or pressure wash unit. Ensure unit is dry prior to reconnecting power.

1. Most problems are caused by incorrect installation or misapplication of the equipment. So it is very important to be sure these factors are correct before making any changes to potentiometer and switch settings.

If you would like assistance evaluating your installation, please call Technical service at (603) 332-6150 (Fax: (603) 332-3758, E-mail: techsupport@dfc.com). We offer experienced technicians whose responsibility it is to make sure you are satisfied with your DFE equipment. They will be pleased to help.

2. The most common source of improper operation of tension equipment is incorrect installation of the tension transducers or using transducers of the wrong load rating. Refer to your transducer instruction manual and check the sizing and installation procedures to verify the installation. NOTE: Avoiding pre-loaded transducers is very important.
3. Verify the electrical connections to the WebHandler™ controller. Refer to Sections 2.6 and 2.7.
4. Proper calibration of the tension meter is very important to the operation of the controller. Be sure the calibration is correct. Refer to Section 3. Improper calibration may cause unstable operation.
5. If your controller has a pneumatic output (WebHandler™ Version P), check the following factors:
 - A. The output pressure should not fall below 5 psi at core diameter. If it does, the controller may be unstable. This is caused by the compressibility of air which creates a time delay when the controller calls for a change of output pressure. At low pressures, the delay becomes long.
 - B. The air connection between the controller and the brake or clutch should be 3/8 inch O.D. tubing, no more than 25ft. long. Larger or longer tubing creates excessive volume which causes a time delay when output pressure changes. This can cause instability. If greater distance is unavoidable, the remote pneumatic module option should be moved to install the servo valve near the brake or clutch. Use of a volume booster is an alternative. Call Technical Service at (603) 332-6150 for details.
6. If the above steps are not successful, perform the basic set-up sequence in Appendix C. If you get unexpected results in any step, call Technical Service at (603) 332-6150 for assistance.

SECTION 7

REPLACEMENT PARTS LIST

7.1 STANDARD CIRCUIT BOARDS

Power Board	723-1324
Control Board	723-1351
Front Board.	723-1349
V-Out board	723-1346

7.2 OPTIONAL CIRCUIT CARDS

Taper by Rider Roll	723-0045
Line Speed Follow by DC Tach	723-1405
Pneumatic Driver Module	723-1409
Isolated Output	723-1355

7.3 OPERATOR DEVICES

AUTO Set Pot.	101-0010
MANUAL Set Pot.	101-0010
Pushbutton cap, maintained	111-0005
Pushbutton cap, momentary	111-0006
Pushbutton switch, white	111-0004
Tension meter, analog	722-1385 (specify scale)
Tension meter, digital	723-0145 (optional)

7.4 OUTPUT MODULES

SCR bridge	103-0013 (High voltage output module for version V)
Servo valve	119-0003 (For version P only)

7.5 FUSES (Slo Blo type)

Power in:	0.25A/250V	108-0046 (All versions of controller, 115 Vac)
	5A/250V	108-0003 (For version V only)
	0.125A/250V	108-0045 (230 Vac)
Power out:	5A/250V	108-0003 (For version V only)

7.6 CABLES

14 Conductor, Ribbon	131-0000 (Option board to control board)
24 Conductor, Ribbon	723-1362 (Control board to Front Board)
34 Conductor, Ribbon	723-1313 (Front Board to Power Board)
6 Conductor	721-1775 (Internal Pneumatic cable)
6 Conductor	721-1776 (WebHandler™ to Pneumatic module)

7.7 RELAYS

TLS Tension Limit Relay		105-0028
-------------------------	--	----------

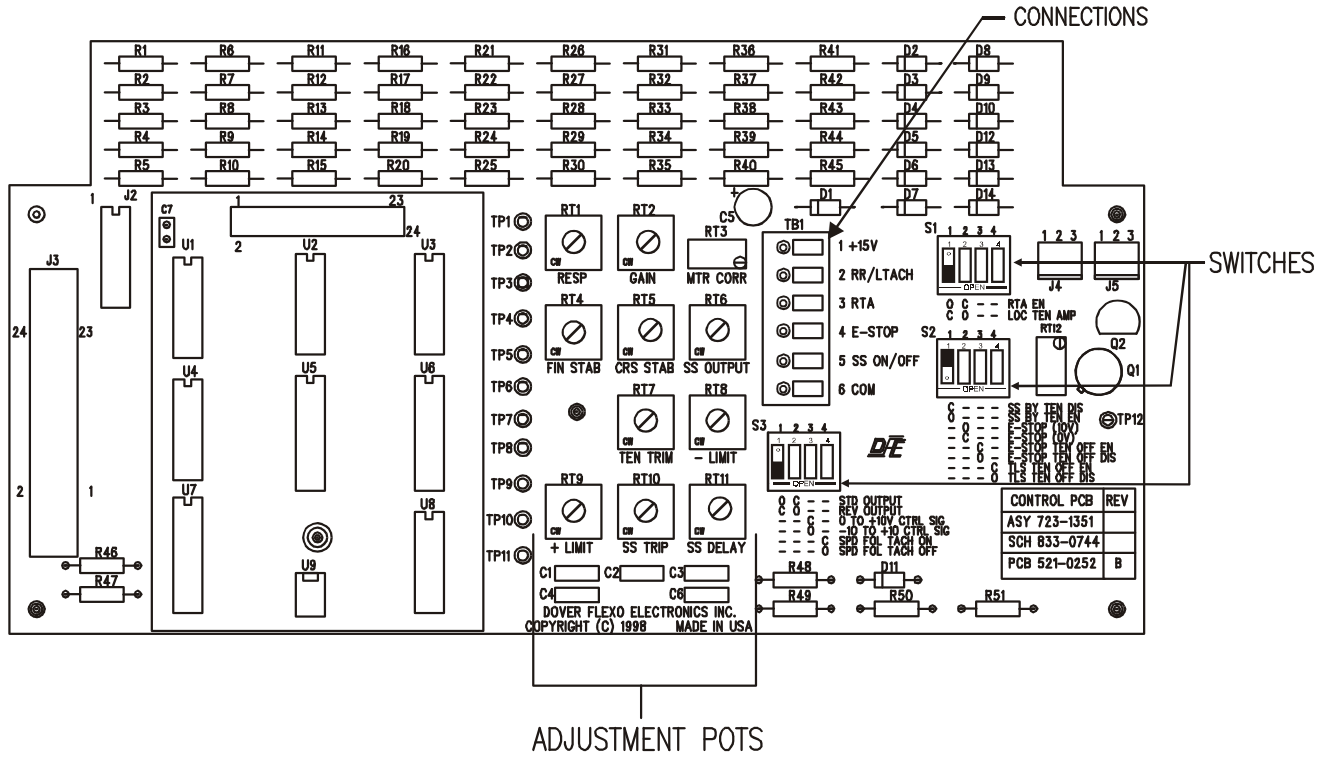


Figure 37 - CONTROL BOARD

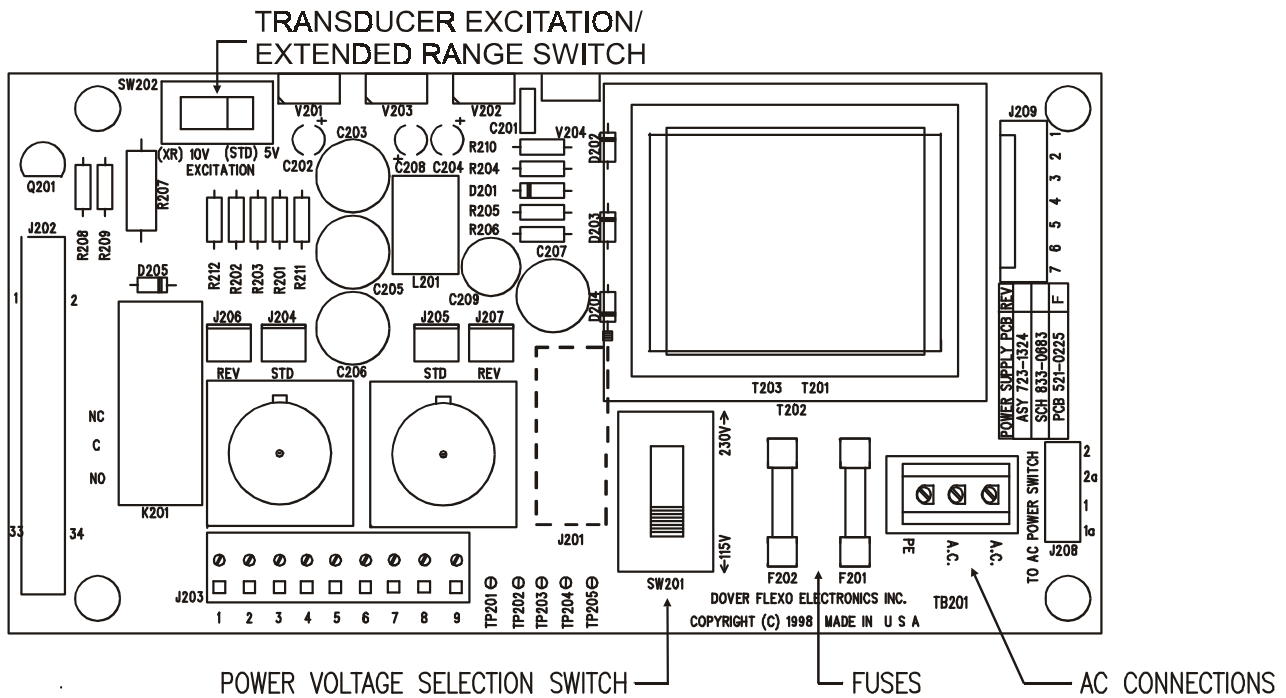


Figure 38 - POWER BOARD

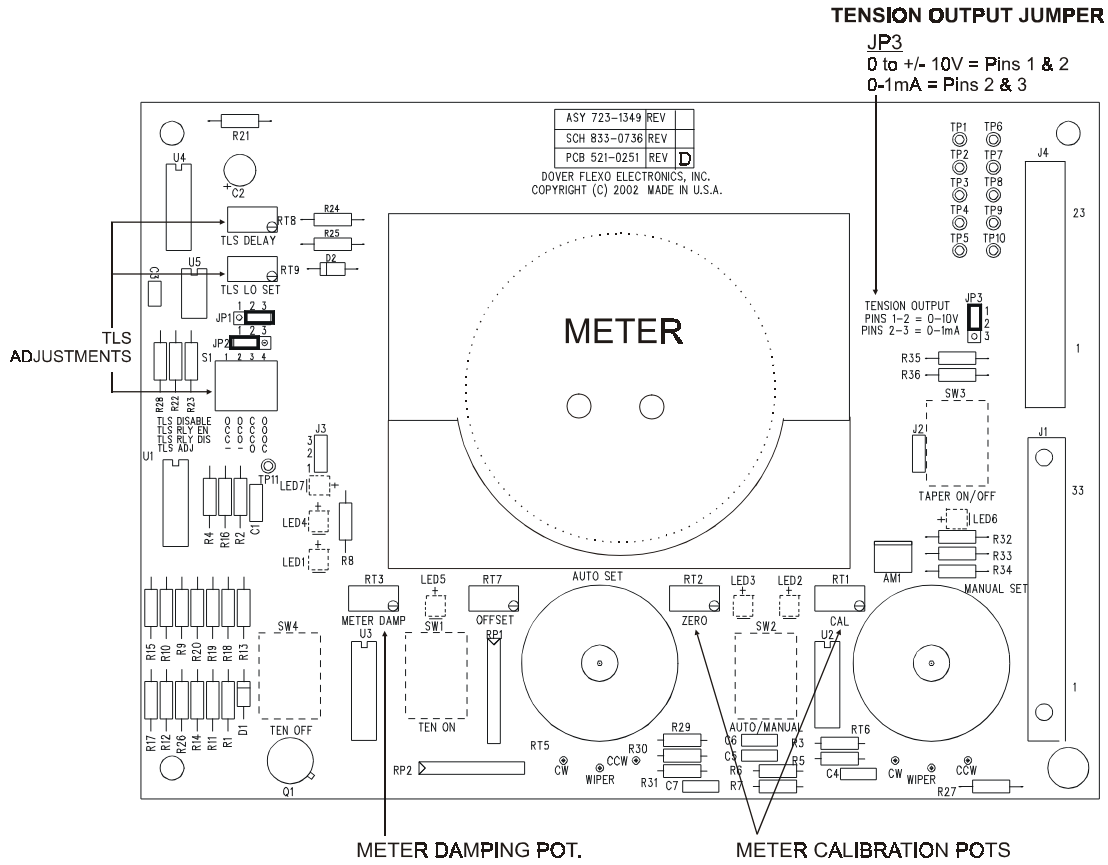


Figure 39 - FRONT BOARD

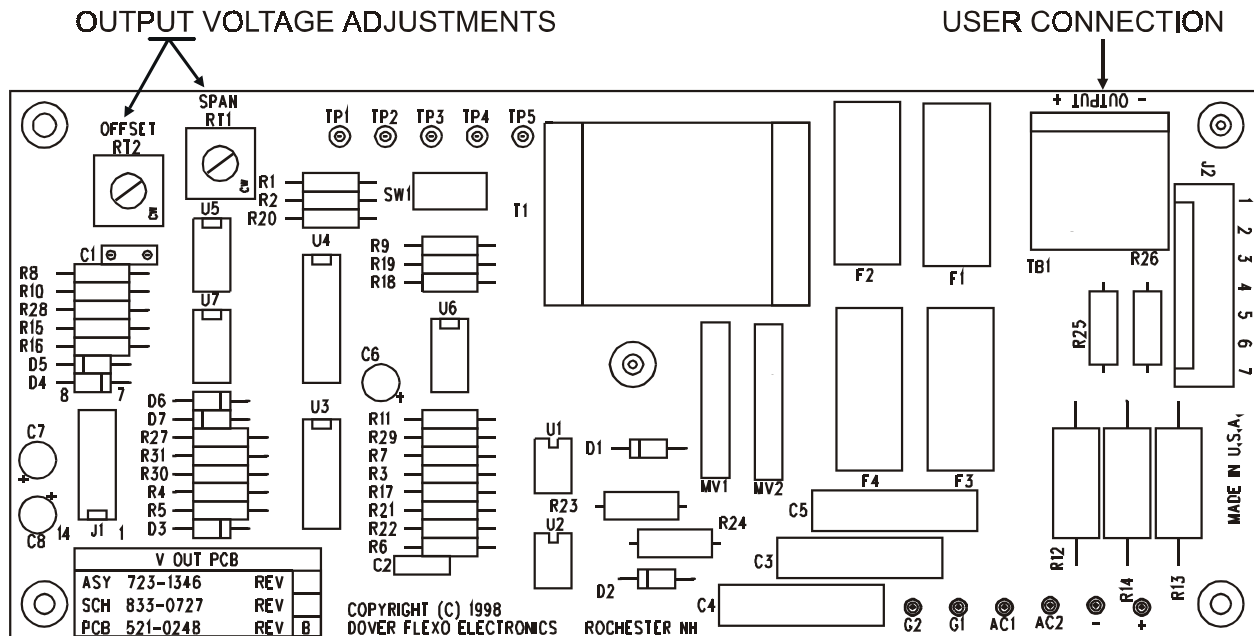


Figure 40 - V-OUT BOARD

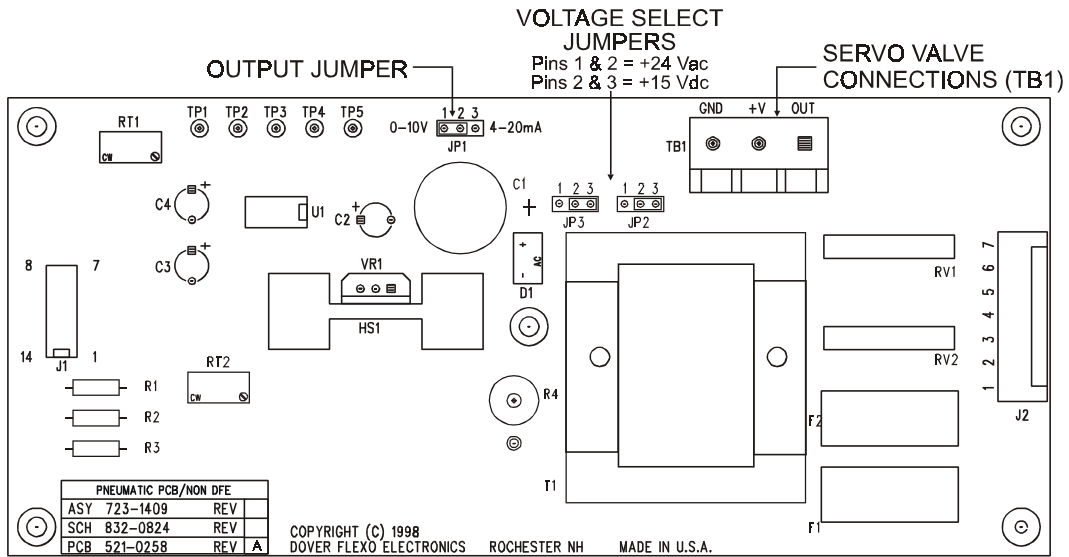


Figure 41 - NON-DFE DRIVER MODULE

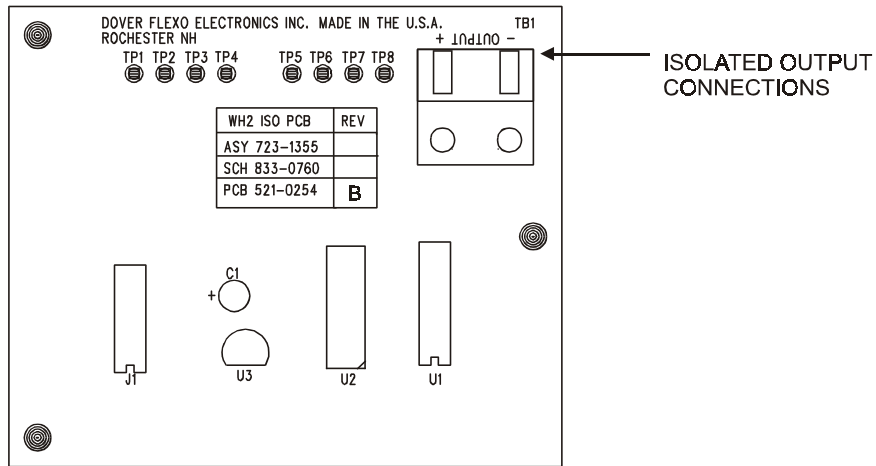


Figure 42 - ISOLATED OUTPUT BOARD

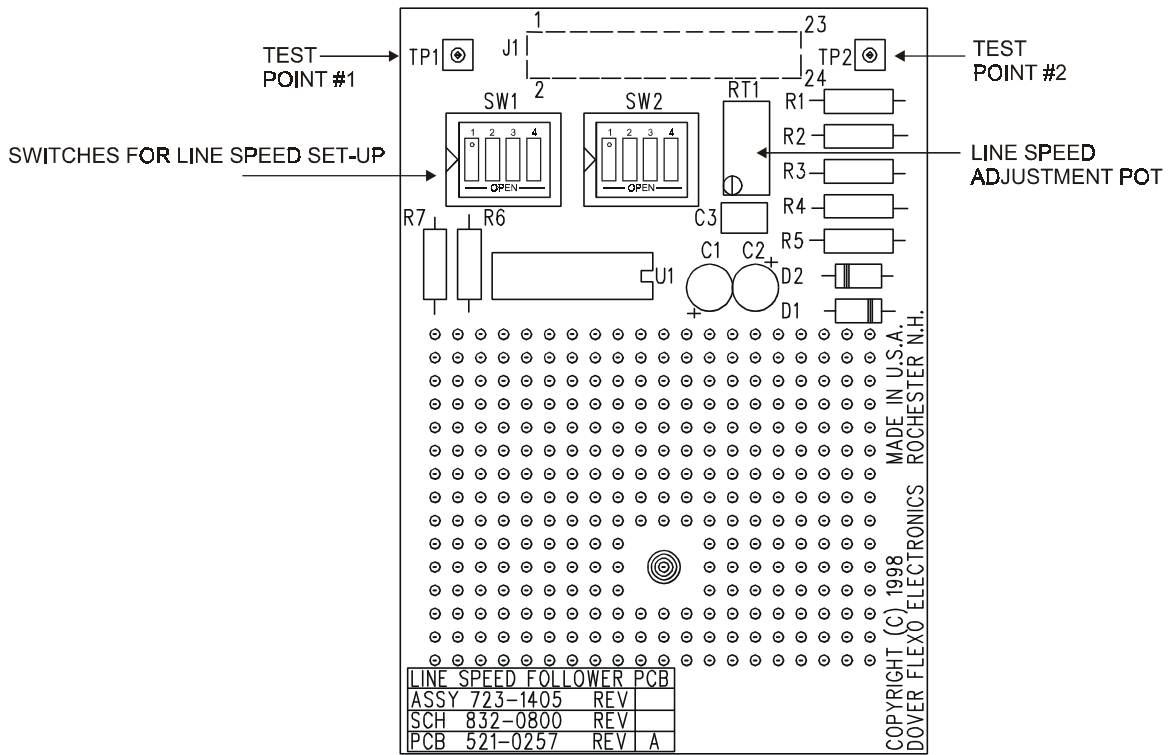


Figure 43 - LINE SPEED FOLLOWER BOARD

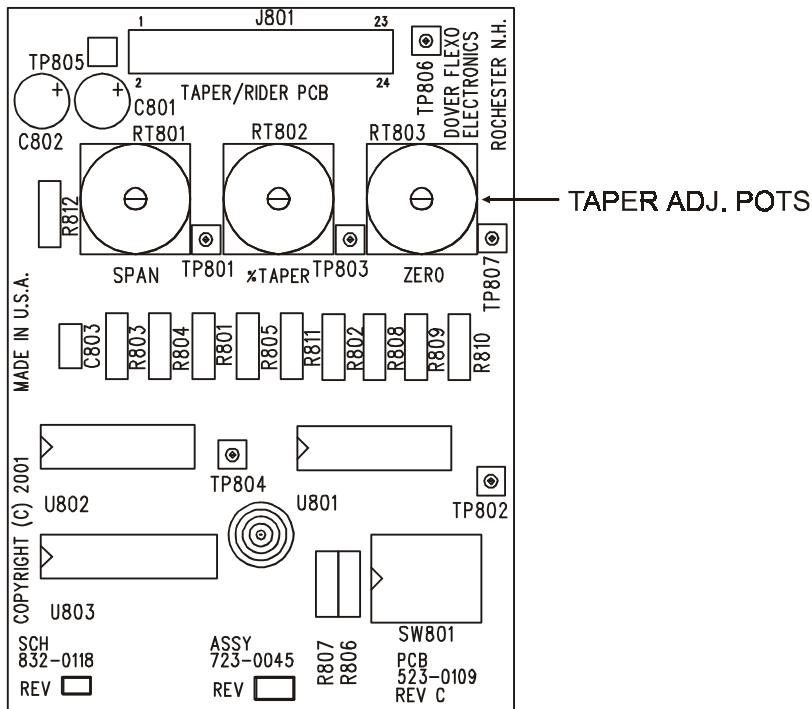


Figure 44 - TAPER TENSION BOARD

Appendix B

DIP Switch Settings & Jumpers

The location of the setup instructions is listed after the switch number.

CONTROL BOARD		O = Switch is Open C = Switch is Closed			
S1	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>
Remote Tension Amp ON	O	C	-	-
Remote Tension Amp OFF	C	O	-	-
Local Tension Amp ON	C	O	-	-
Local Tension Amp OFF	O	C	-	-
S2	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>
Soft Start by tension ON	O	-	-	-
Soft Start by tension OFF	C	-	-	-
E-Stop Output (10 Volts)	-	O	-	-
E-Stop Output (0 Volts)	-	C	-	-
E-Stop Enabled -Tension OFF	-	-	C	-
E-Stop Disabled -Tension ON	-	-	O	-
Tension Off by TLS ON	-	-	-	C
Tension Off by TLS OFF	-	-	-	O
S3	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>
Reverse Output (REV)	C	O	-	-
Standard Output (STD)	O	C	-	-
Limit Negative Output (-0.6 to +10)	-	-	C	-
Bipolar Output (-10 to +10)	-	-	O	-
Speed Follow Tach ON	-	-	-	C
Speed Follow Tach OFF	-	-	-	O
FRONT BOARD					
S1	<u>1</u>	<u>2</u>	<u>3</u>	<u>4</u>
TLS ON	C	-	-	-
TLS OFF	O	-	-	-
Relay Disabled	-	O	-	-
Relay Enabled	-	C	-	-
View TLS Adjust	-	-	O	C
View Tension Signal	-	-	C	O
JP3					
-/+ 10V Tension Output	Jumper Pins 1 and 2			
0-1mA Tension Output	Jumper Pins 2 and 3			

This section of the instruction manual is provided for those cases in which many DIP switches or potentiometer settings may have been changed and it is reasonable to assume that nothing is set correctly. In order to get the controller operating properly perform the set-up in the sequence given below. This is the sequence used here at Dover Flexo Electronics. For the sake of clarity, the actual set up steps are not repeated here because they are located elsewhere in this book. Their locations are stated after the setup step descriptions.

1. Turn off the ac power to the controller.
2. Open the cover to expose the circuit boards.
3. Set the DIP switches on the Control board. (Appendix B, Section for S1)
4. Verify the power voltage selection switch and fuse values on the Power Board. (Section 2.4)
5. Turn on the AC power to the controller and check the power supplies. Refer to Figure 38, the Power Board. Verify the following voltages using the test points listed.

+15 Volt	TP201 (+) and TP204	
-15 Volt	TP205 (+) and TP204	
5 Volt/10 Volt	TP203 (+) and TP204	(transducer supply, 10V if using XR)
5 Volt	TP202 (+) and TP204	
6. Calibrate the tension meter. (Sections 3.1 and 3.2)
7. Adjust the Meter Correlation Pot. (Section 3.11)
8. Set up the output circuit.
(Section 3.8 High Voltage output, Version V)
(Section 3.12 Pneumatic output, Version P)
9. Check operation of Emergency Stop, if used. (Section 3.6)
10. Set up Soft Start, if used. If Soft Start is speed-actuated, perform step 11 first. (Section 3.16)
11. Set up line speed option card, if installed (Section 3.10). Only Steps 1-4 are required by the soft start function. Disregard all remaining steps in section 3.10.
12. Set up the TAPER card, if used. (Section 3.17 if using Roll Follower or rangefinding device for diameter input)
13. Tune for running stability. (Section 3.19)

Appendix D: Transducer Electrical Connections

MODELS C, RS, AND UPB TRANSDUCERS

THE TENSION (T) AND COMPRESSION STRAIN GAGES ARE CONNECTED IN A BRIDGE CONFIGURATION. AS THE BEAMS BEND SLIGHTLY UNDER WEB TENSION, THE GAGE RESISTANCES CHANGE PRODUCING AN OUTPUT SIGNAL WHICH IS DIRECTLY PROPORTIONAL TO THE WEB TENSION.

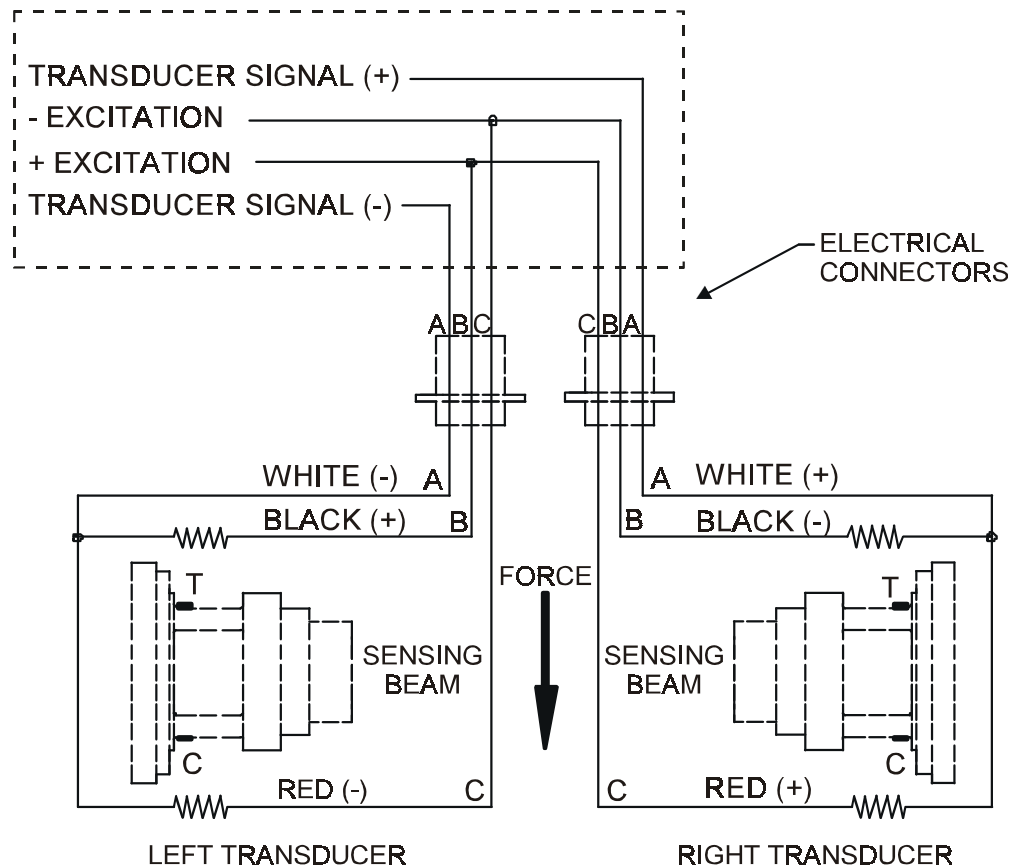


Figure 45 - MODELS C, RS, & UPB TRANSDUCER WIRING

RIBBON FILAMENT (RFA) & VNW TRANSDUCERS

THE TENSION (T) AND COMPRESSION (C) STRAIN GAGES ARE CONNECTED IN A BRIDGE CONFIGURATION. AS THE BEAMS BEND SLIGHTLY UNDER WEB TENSION, THE GAGE RESISTANCES CHANGE PRODUCING AN OUTPUT SIGNAL WHICH IS DIRECTLY PROPORTIONAL TO THE WEB TENSION.

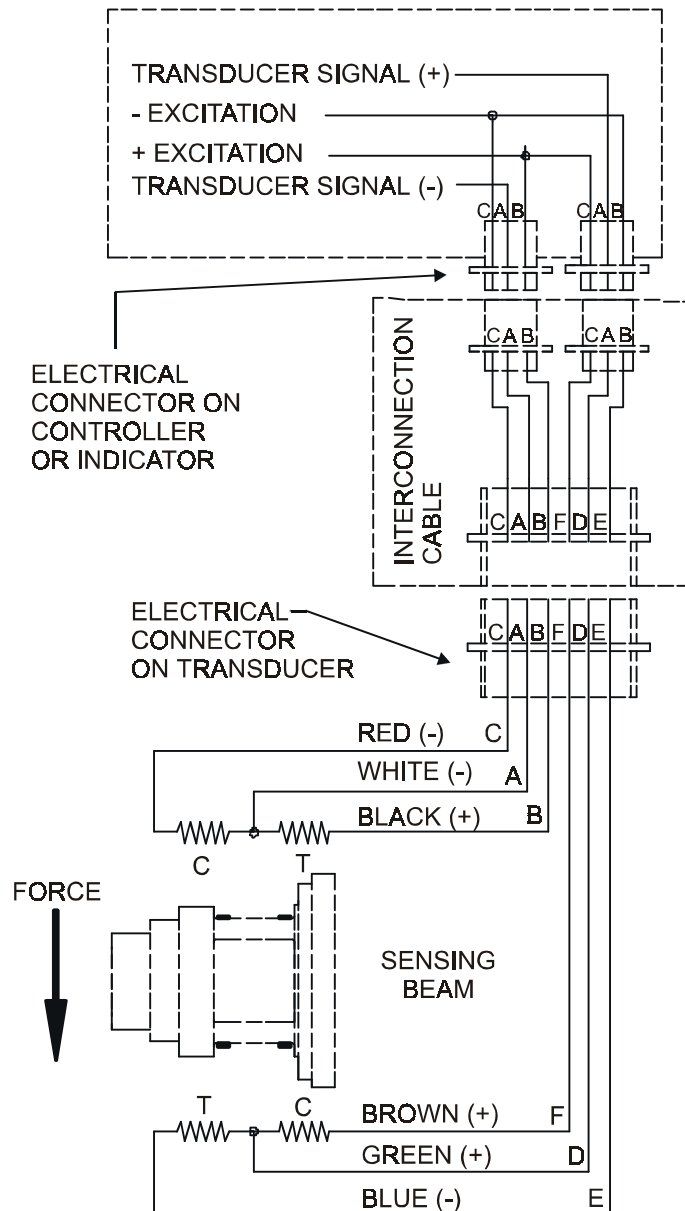


Figure 46 - MODEL RFA & VNW TRANSDUCER WIRING

TENSION ROLL (TR) AND NARROW WEB (NWI) TRANSDUCERS

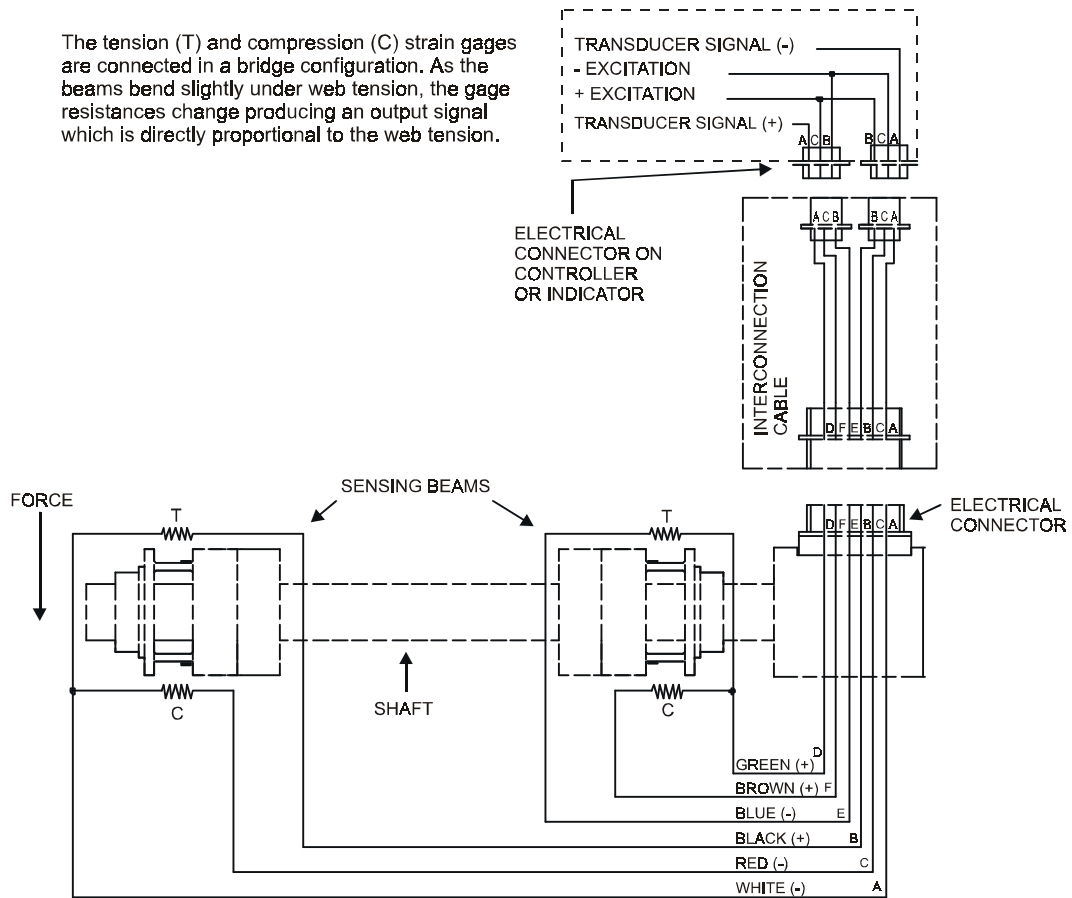


Figure 47 - MODELS TR & NWI TRANSDUCER WIRING

LOW TENSION (LT) TRANSDUCERS

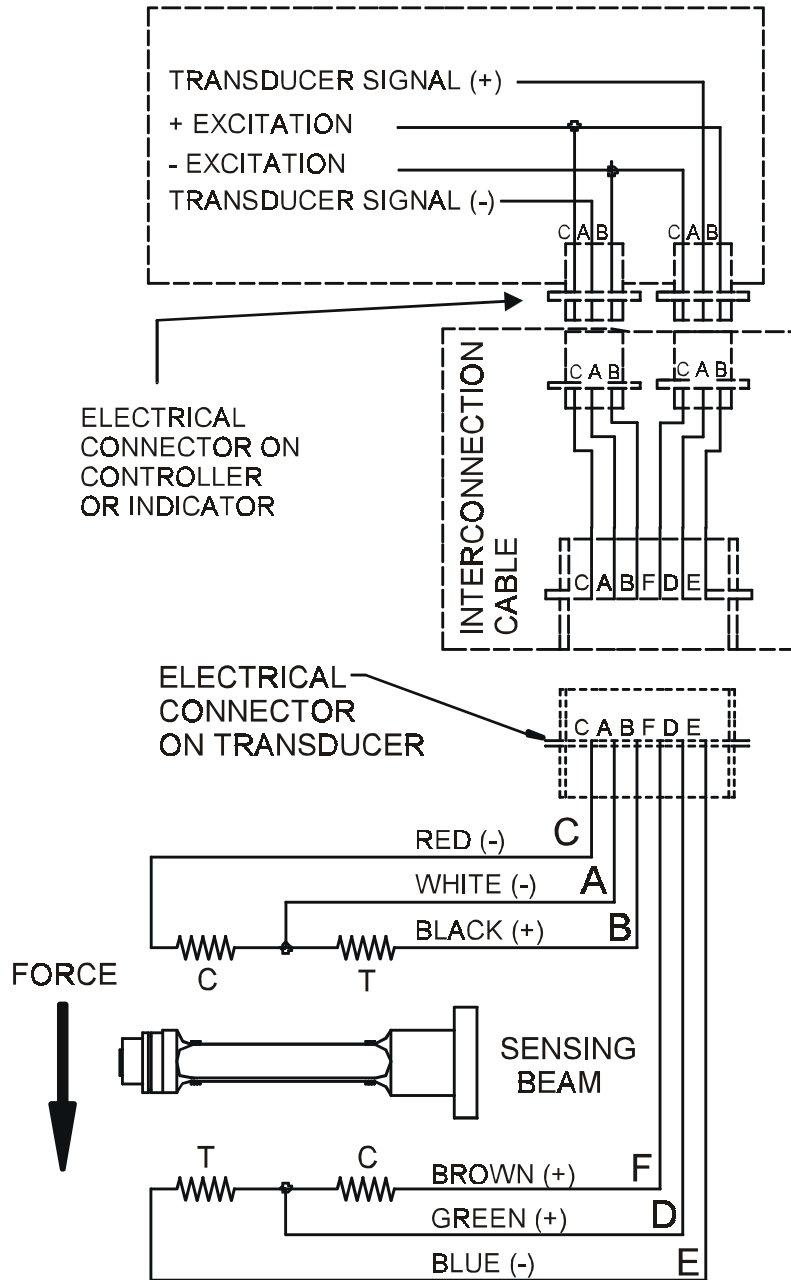


Figure 48 - MODEL LT TRANSDUCER WIRING

Appendix E: Typical Tension for Various Materials

TYPICAL TENSIONS FOR WEB MATERIALS

ACETATE		0.5 lb. per mil per inch of width	
FOIL	Aluminum	0.5 lb. per mil per inch of width	
	Copper	0.5 lb. "	
CELLOPHANE		0.75 lb. per mil per inch of width	
NYLON		0.25 lb. per mil per inch of width	
PAPER	15 lb *	0.4 lb. per inch of width	
	20 lb	0.5 lb. "	
	30 lb	0.75 lb. "	
	40 lb	1.25 lb. "	
	60 lb	2.0 lb. "	
	80 lb	3.0 lb. "	
	100 lb	4.0 lb. "	
* based on 3000 sq. ft. ream			
PAPERBOARD	8pt	3.0 lb. per inch of width	
	12pt	4.0 lb. "	
	15pt	4.5 lb. "	
	20pt	5.5 lb. "	
	25pt	6.5 lb. "	
	30pt	8.0 lb. "	
POLYETHYLENE		0.12 lb. per mil per inch of width	
POLYESTER (Mylar)		0.75 lb. per mil per inch of width	
POLYPROPYLENE		0.25 lb. per mil per inch of width	
POLYSTYRENE		1.0 lb. per mil per inch of width	
RUBBER	<u>GAUGE</u>	<u>AT 25% STRETCH</u>	<u>AT 50% STRETCH</u>
	10 mil	1.75	3.68
	12 mil	1.10	2.03
	16.5 mil	4.09	8.17
	26 mil	2.47	4.97
SARAN		0.15 lb per mil per inch of width	
STEEL	<u>GAUGE - INS</u>	<u>UNWIND-PSI</u>	<u>REWIND-PSI</u>
	.001 -.005	1000	4000
	.006 -.025	850	3500
	.026 -.040	750	3000
	.041 -.055	650	2600
	.058 -.070	550	2200
	.071 -.090	450	1800
	.091 -.120	450	1400
	.121 -.140	400	1200
	.141 -.165	400	1000
	.166 -.200	400	900
	.201 -.275	400	800
.276 -.380	300	700	
VINYL		0.05 lb. per mil per inch of width	

*** For laminated webs, sum the tension for the individual webs and add 0.1 lb per inch of width.

TERMS AND CONDITIONS OF SALE AND SHIPMENT

1. THE COMPANY

Dover Flexo Electronics, Inc. is hereinafter referred to as the Company.

5/1/00

2. CONFLICTING OR MODIFYING TERMS

No modification of, additions to or conflicting provisions to these terms and conditions of sale and shipment, whether oral or written, incorporated into Buyer's order or other communications are binding upon the Company unless specifically agreed to by the Company in writing and signed by an officer of the Company. Failure of the Company to object to such additions, conflicts or modifications shall not be construed as a waiver of these terms and conditions nor an acceptance of any such provisions.

3. GOVERNING LAW

This contract shall be governed by and construed according to the laws of the state of New Hampshire, U.S.A. The parties agree that any and all legal proceedings pursuant to this contract shall take place under the jurisdiction of the courts of the State of New Hampshire in the judicial district of Strafford County.

4. PENALTY CLAUSES

Penalty clauses of any kind contained in orders, agreements or any other type of communication are not binding on the Company unless agreed to by an officer of the Company in writing.

5. WARRANTY

Dover Flexo Electronics, Inc. warrants its' products to be free of defects in material and workmanship for five years from date of original shipment. Warranty is valid on products purchased on or after April 2, 1999. During the warranty period the Company will repair or replace defective products free of charge if such products are returned with all shipping charges prepaid and if, upon examination, the product is shown to be defective. This warranty shall not apply to products damaged by abuse, neglect, accident, modification, alteration or mis-use. Normal wear is not warranted. All repairs and replacements under the provisions of this warranty shall be made at Dover Flexo Electronics or at an authorized repair facility. The Company shall not be liable for expenses incurred to repair or replace defective products at any other location or by unauthorized persons or agents. This warranty contains all of the obligations and warranties of the Company. There are no other warranties, either expressed or implied. No warranty is given regarding merchantability or suitability for any particular purpose. The Company shall not be liable in either equity or law for consequential damages, losses or expenses incurred by use of or inability to use its' products or for claims arising from same. No warranty is given for products of other manufacturers even though the Company may provide these products with its' own or by themselves. The provisions of this warranty can not be changed in any way by any agent or employee of the Company. Notice of defects must be received within the warranty period or the warranty is void.

6. PAYMENTS

Standard terms of credit are net 30 days from date of shipment, providing satisfactory credit is established with the Company. Amounts past due are subject to a service charge of 1.5% per month or portion thereof or 18% per annum. The Company reserves the right to submit any unpaid late invoices to a third party for collection and Buyer shall pay all reasonable costs of such collection in addition to the invoice amount. All quoted prices and payments shall be in U.S. Dollars.

If the Company judges that the financial condition or payment practices of the Buyer does not justify shipment under the standard terms or the terms originally specified, the Company may require full or partial payment in advance or upon delivery. The Company reserves the right to make collection on any terms approved in writing

by the Company's Finance Department. Each shipment shall be considered a separate and independent transaction and payment therefore shall be made accordingly. If the work covered by the purchase order is delayed by the Buyer, upon demand by Company payments shall be made on the purchase price based upon percentage of completion.

7. TAXES

Any tax, duty, custom, fee or any other charge of any nature whatsoever imposed by any governmental authority on or measured by any transaction between the Company and the Buyer shall be paid by the Buyer in addition to the prices quoted or invoiced.

8. RETURNS

Written authorization must be obtained from the Company's factory before returning any material for which the Buyer expects credit, exchange, or repairs under the Warranty. Returned material (except exchanges or repairs under the Warranty) shall be subject to a minimum re-stocking charge of 15%. Non-standard material or other material provided specially to the Buyer's specification shall not be returnable for any reason. All material returned, for whatever reason, shall be sent with all freight charges prepaid by the Buyer.

9. SHIPPING METHOD AND CHARGES

All prices quoted are F.O.B. the Company's factory. The Company shall select the freight carrier, method and routing. Shipping charges are prepaid and added to the invoice of Buyers with approved credit, however the Company reserves the right to ship freight-collect if it prefers. Shipping charges will include a charge for packaging. Company will pay standard ground freight charges for items being returned to Buyer which are repaired or replaced under the Warranty.

10. CANCELLATION, CHANGES, RESCHEDULING

Buyer shall reimburse Company for costs incurred for any item on order with the Company which is canceled by the Buyer. Costs shall be determined by common and accepted accounting practices. A one-time hold on any item ordered from the Company shall be allowed for a maximum of 30 days. After 30 days, or upon notice of a second hold, Company shall have the right to cancel the order and issue the appropriate cancellation charges which shall be paid by Buyer. Items held for the Buyer shall be at the risk and expense of the Buyer unless otherwise agreed upon in writing. Company reserves the right to dispose of canceled material as it sees fit without any obligation to Buyer.

If Buyer makes, or causes to make, any change to an order the Company reserves the right to change the price accordingly.

11. PRICES

Prices published in price lists, catalogs or elsewhere are subject to change without notice and without obligation. Written quoted prices are valid for thirty days only.

12. EXPORT SHIPMENTS

Payment for shipments to countries other than the U.S.A. and Canada or to authorized distributors shall be secured by cash in advance or an irrevocable credit instrument approved by an officer of the Company. An additional charge of 10% will apply to any letter of credit. There will be an extra charge for packaging and documentation.

13. CONDITION OF EQUIPMENT

Buyer shall keep products in good repair and shall be responsible for same until the full purchase price has been paid.

14. OWNERSHIP

Products sold are to remain the property of the Company until full payment of the purchase price is made.

INDEX

0-10 Volt Control Output	2, 10	Pneumatic Driver	15-16
isolated	4, 12	Pneumatic	
230 Volt Power	2, 3	assembly options	3, 4, 14-15
AC Power Connections	8, 25	output	1, 14
Adjustments	19, 25	input required	2
(also see specific options)		tubing	2
Automatic Control Mode	3	Power Board	2, 25
Calibration		Power Voltage Selection	3, 7, 25
tension meter	9, 25-26	Relays, replacement	24
range	2	Remote Panel Configuration	3, 5, 7
Care and Maintenance	22	Remote Pneumatic Assembly	5, 6, 14
Control Board	2, 25	Remote Tension Amplifier	4, 16
DIP Switch Settings	29	Replacement Parts	
Digital Meter	3, 10-11	fuses	24
Dimensions	5-6	operator devices	24
Electrical Connections,		optional circuit cards	24
standard	8	output modules	24
optional	8	relays	24
transducer	31-35	std. circuit cards	24
Emergency Stop	3, 8, 11	ribbon cables	24
Enclosure	2, 5, 6	Response	19, 20, 25
Extended Range	4, 12, 25	Ribbon Cables, replacement	24
Front Board	2, 26	Servo Valve Assembly	3
Front Panel	4, 5	Servo Valve Enclosure	6
Fuses, replacement	24, 25	Set-up, basic	30
Gain	19, 20, 25	Soft Start	3, 8, 17
High Voltage Output	1, 12	Specifications	2
Installation	5-8	Stability	19, 25
remote panel configuration	5, 7	Standard Features	3
standard unit	5-8	Status Lights	3, 4
Line Speed Follow	4, 13	Switch Settings	29
Manual Control Mode	3	Taper Tension	2, 4, 18
range	2	Temperature Range	2
Meter,		Tension Display	3
calibration	9-11, 26	Tension Limit Switch	3, 19
correlation	3, 14	Tension Meter	2, 3, 9, 24
damping	3, 9, 26	standard scales	2
mechanical Zero	9	digital	3, 10-11
non-standard meter scale	4	Tension Signal Output, 0-10V	2, 3, 10
Mounting Screws	5, 7	Terms & Conditions	36
Operation Instructions	21	Transducer	
Operator Devices	4	cables	2, 24
replacement	24	connections	31-34
Options	3, 4	excitation	2, 7, 25
Output,		Troubleshooting	23
0-75 psi	1, 2	Tuning for stability	
0-90 volt	1, 2, 12	adjustments and procedure	19, 20
0-24 volt	2, 3, 12	Typical Tensions	35
0-45 volt	2, 3, 12	V-Out Board	12, 26
Output Module	1	Version of Controller	1
replacements	24	WH-D	1
		WH-P	1
		WH-V	1
		Weight	2
		Zero	
		meter	9
		range	2



217 PICKERING ROAD
ROCHESTER, NEW HAMPSHIRE 03867-4630 U.S.A
TEL: 603/332-6150
FAX: 603/332-3758
E-MAIL: info@dfc.com INTERNET: www.dfc.com

CANADA

MEXICO

UNITED KINGDOM

EUROPE

TAIWAN

KOREA

AUSTRALIA

COLOMBIA

INDIA