STEADYVIEW™ Panel Mount Tension Indicator

The SteadyViewTM Panel Mount microprocessor-based tension indicator sports a wealth of features in a small, easy-to-use package. Designed for easy connection to Dover Flexo Electronics tension transducers and Tension Roll[®] transducers. An innovative combination of analog and digital circuitry allows the microprocessor to resolve web tensions up to the maximum tension limit of the tension transducers used.

The SteadyViewTM can be configured to display tension in a wide variety of measurement units. Along with the actual tension, the appropriate unit labels are shown directly on the display, to eliminate operator confusion when different measurement units are required.

The setup and calibration procedure is simple because the display prompts the user in English (or German, Spanish, Dutch, or French) at each step of the way. This procedure is performed using buttons on the front panel. When finished, the setup information is stored in EEPROM, which never requires batteries.

BENEFITS

- Provides continuous tension readout
- Accurate display of web tension
- Simple well-defined interface with DFE controllers or supervisory control computers
- Simple installation
- Versatile, can switch between English and metric units without recalibration
- Helps reduce waste and increase productivity
- Reduces web breaks and machine downtime

OPTIONS

- Extended Range (XRE) Allows measurement of a much lower tension. Switch selectable (internally). Transducers must have XR option.
- French (FR), German (GE), Italian (IT) or Spanish (SP) languages selectable for menu prompts and setups.
- RS422, or RS485 Serial Computer Data Interface. Multiple baud rates, communication settings, and data output formats allows setup and control by host computer.

FRONT PANEL:

An 8-character dot-matrix LED display provides a wide viewing angle and excellent readability under all viewing conditions. In addition, three status LED's tell the operator whether the unit is in Run, Review, or Edit mode. The unit is designed to mount in a small panel cutout, or an optional stand can be used to mount the indicator on top of a machine or on a bench.

Standard features include a serial computer data interface, RS232D, which allows communication with computers for data collection, and a tension limit switch (TLS) which can be used to protect machinery from excessive tension, or to detect web breaks.


Another unique feature of the SteadyView Panel mount indicator is that the analog output can be used as a programable output whose value can be controlled using the serial interface. This output can be used to interface to other components near the indicator, while the indicator display reads process tension.

FEATURES -

- 0-10Vdc, 0-20mA, or 4-20mA Tension or programmable outputs
- LED Display. Dot matrix LED with 8 character display.
- LED Status Lights shows what functions are in use.
- **Tension Limit Switch** activates a preset adjustable trip point. Protects machinery from excessive tension and can detect web breaks.
- **RS232D** serial computer interface allows communication with computers for data collection.

ACCESSORIES

• **Mounting Stand** for locating unit at an upward angle on top of a flat surface.

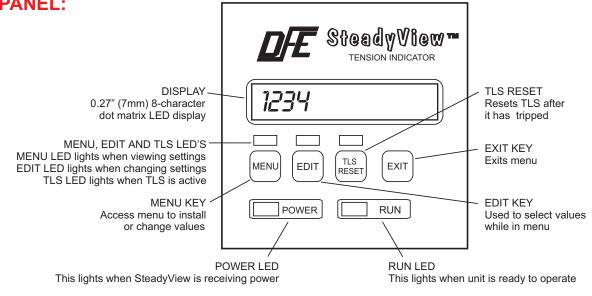

SPECIFICATIONS

Input Voltage: 115V or 230Vac 50/60 Hz @ 1 Amp (switch selectable, external)

Tension Output Signal: 0-10V, 0-20mA, 4-20mA (Switch selectable, internal)

Transducer Excitation: +5Vdc standard or +10 Vdc with XR option (Switch selectable, internal)

Transducer Input Signal Range: -500mV to +500mV

Mating Transducer Cable Connectors: 3 Pin MS3106A-10SL-3S Zero Range: Up to 95% of rated output

Storage Temperature Range: 0° to 125° F (-17° to 52°C)

Operating Temperature Range: 32° to 100° F (0° to 38° C)

Weight: 3 lbs. (1.36 kg)

Standard Tension Display Range: Four digits maximum

Serial Interface Connector 9 pin D-SUB male connector

ORDERING INFORMATION -

Select SVP for SteadyView[™] Panel Mount tension indicator. Follow with hyphen, meter scale selection, then options as desired, separated by commas.

SVP	· - XX ·	- OPTIONS (Separated by	y commas)	Example: SVP - 25 - 230,XRE
	METER SCALE	OPTIONS		

Notes: 1. Transducers must have XR option.

A stand is also available for this SteadyView[™] unit as an accessory. Specify part number 130-0015 when ordering.

DIMENSIONS inches (mm)

